

# Index

T1~T17

Index Descriptions of the products described in this book are listed in alphabetic order.

# T

# Description Index

○ : Figure, □ : Alphabet

Description	Page	Category
<b>Numeric</b>		
16ER A○○	J12,J14	Insert (Threading)
16ER AG○○	J12,J14	Insert (Threading)
16ER G○○	J12,J14	Insert (Threading)
16ER A○○-TF	J12,J14	Insert (Threading) / TF series
16ER AG○○-TF	J12,J14	Insert (Threading) / TF series
16ER G○○-TF	J12,J14	Insert (Threading) / TF series
16ER ○○BSPT	J10	Insert (Threading)
16ER ○○BSPT-TF	J10	Insert (Threading) / TF series
16ER ○○(.○)NPT	J10	Insert (Threading)
16ER ○○UN	J8	Insert (Threading)
16ER ○○UN-TF	J8	Insert (Threading) / TF series
16ER ○○W	J8	Insert (Threading)
16ER ○○W-TF	J8	Insert (Threading) / TF series
16E%L ○○○ISO	J6	Insert (Threading)
16ER ○○○ISO-TF	J6	Insert (Threading) / TF series
16ER ○○○TR	J14	Insert (Threading)
16ER ○○○○	J12,J14	Insert (Threading)
22ER N○○	J12,J14	Insert (Threading)
22ER ○○UN	J8	Insert (Threading)
22ER ○○○ISO	J6	Insert (Threading)
22ER ○○○TR	J14	Insert (Threading)
06IR ○○○○(○)	J13,J15	Insert (Threading)
08IR ○○○○(○)	J13,J15	Insert (Threading)
11IR A○○	J13,J15	Insert (Threading)
11IR ○○BSPT	J11	Insert (Threading)
11IR ○○BSPT-TF	J11	Insert (Threading) / TF series
11I%L ○○○ISO	J7	Insert (Threading)
11IR ○○○ISO-TF	J7	Insert (Threading) / TF series
11IR ○○○○	J13,J15	Insert (Threading)
16IR A○○	J13,J15	Insert (Threading)
16IR AG○○	J13,J15	Insert (Threading)
16IR G○○	J13,J15	Insert (Threading)
16IR ○○BSPT	J11	Insert (Threading)
16IR ○○BSPT-TF	J11	Insert (Threading) / TF series
16IR ○○(.○)NPT	J11	Insert (Threading)
16IR ○○UN	J9	Insert (Threading)
16IR ○○UN-TF	J9	Insert (Threading) / TF series
16IR ○○W	J9	Insert (Threading)
16IR ○○W-TF	J9	Insert (Threading) / TF series
16I%L ○○○ISO	J7	Insert (Threading)
16IR ○○○ISO-TF	J7	Insert (Threading) / TF series
16IR ○○○TR	J15	Insert (Threading)
16IR ○○○○(○)	J13,J15	Insert (Threading)
22IR N○○	J13,J15	Insert (Threading)
22IR ○○UN	J9	Insert (Threading)
22IR ○○○ISO	J7	Insert (Threading)
22IR ○○○TR	J15	Insert (Threading)
2FEKM ○○○○○○	L12	Solid End Mill
2FEKS ○○○○○○	L12	Solid End Mill
2FESL ○○○○○○	L11	Solid End Mill
2FESM ○○○○○○	L10,L11	Solid End Mill
2FESS ○○○○○○	L10	Solid End Mill
2FESW ○○○○○○(A)	L14	Solid End Mill (for Automatic Lathe)
2SEB ○○○○○○-R○○	L31	Solid End Mill (Ball-Nose)
2UEBS ○○○○○○	L32	Solid End Mill (Ball-Nose)
2ZDK ○○○	L49	Counterboring
2ZDK ○○○S	L50,L51	Counterboring
2ZDK ○○○S-P	L50	Counterboring
3AESL ○○○○○○	L46	Solid End Mill
3AESM ○○○○○○	L46	Solid End Mill
3AFK ○○○○○○	L42,L43	Solid End Mill
3AFK ○○○○○○	L42,L43	Solid End Mill
3FESW ○○○○○○(A)	L14	Solid End Mill (for Automatic Lathe)
3NESM ○○○○○○	L44	Solid End Mill
3NFSL ○○○○○○	L45	Solid End Mill
3UEBS ○○○○○○	L32	Solid End Mill (Ball-Nose)
3UFMS ○○○○○○	L15	Solid End Mill
3ZFKM ○○○○○○	L19	Solid End Mill
3ZFKS ○○○○○○	L19	Solid End Mill
4FEKM ○○○○○○	L13	Solid End Mill
4FESM ○○○○○○	L13	Solid End Mill
4FESW ○○○○○○	L14	Solid End Mill (for Automatic Lathe)
4JER ○○○○○○-R○○	L37	Solid End Mill
4MFK ○○○○○○	L21	Solid End Mill

Description	Page	Category
4MFR ○○○○○○-R○○	L21	Solid End Mill
4PGRM ○○○○○○-R○○○	L17	Solid End Mill
4TFK ○○○○○○	L23	Solid End Mill
4TFR ○○○○○○-R○○	L23	Solid End Mill
4YEBM ○○○○○○	L33	Solid End Mill (Ball-Nose)
4YECM ○○○○○○-C○○	L24	Solid End Mill
4YEKM ○○○○○○	L24	Solid End Mill
4YERM ○○○○○○-R○○○	L24	Solid End Mill
5DEKM ○○○○○○	L25	Solid End Mill
5DERM ○○○○○○-R○○○	L25	Solid End Mill
6PDRS ○○○○○○	L34	Solid End Mill
6PFK ○○○○○○(○)	L29	Solid End Mill
8PFK ○○○○○○(○)	L29	Solid End Mill
○HFMS ○○○○○○	L38	Solid End Mill
○HFSS ○○○○○○	L38	Solid End Mill
○NFMS ○○○○○○	L45	Solid End Mill
○PGSL ○○○○○○	L16	Solid End Mill
○PGSM ○○○○○○	L16	Solid End Mill
○PGSS ○○○○○○	L16	Solid End Mill
○RDSL ○○○○○○	L26	Solid End Mill
○RDMS ○○○○○○	L26	Solid End Mill
○RFRS ○○○○○○-R○○○	L27	Solid End Mill
○RFMS ○○○○○○	L27	Solid End Mill
○UGSM ○○○○○○	L39	Solid End Mill
○YFSM ○○○○○○	L25	Solid End Mill
556C%L	D23,P8	Spare Parts (Shim)
<b>A</b>		
A63-WH- C○○○○○(○)	N10	Toolholder (HSK Tooling / Previous Description)
A63-WH- KGBA%L-16	N9	Grooving (HSK Tooling / Previous Description)
A63-WH- KGBA%L-22-○○	N9	Grooving (HSK Tooling / Previous Description)
A63-WH- KTNR-○○	N9	Threading (HSK Tooling / Previous Description)
A63-WH- N○○○○○(○)	N10	Toolholder (HSK Tooling / Previous Description)
A63-WH- PCLN%L-DX12	N5	Toolholder (HSK Tooling / Previous Description)
A63-WH- PCMNN-□12	N5	Toolholder (HSK Tooling / Previous Description)
A63-WH- PDJN%L-DX15	N5	Toolholder (HSK Tooling / Previous Description)
A63-WH- PDNNN-□15	N6	Toolholder (HSK Tooling / Previous Description)
A63-WH- PTGN%L-DX16	N6	Toolholder (HSK Tooling / Previous Description)
A63-WH- PWLN%L-DX08	N7	Toolholder (HSK Tooling / Previous Description)
A63-WH- S2525%L-105	N3	Toolholder (HSK Tooling / Previous Description)
A63-WH- WTENN-□16	N6	Toolholder (HSK Tooling / Previous Description)
A63-WH- WWMNN-□08	N7	Toolholder (HSK Tooling / Previous Description)
A○○□- DCLN%L○○○○	F67	Boring Bars (Double Clamp)
A○○□- DDUN%L○○○○	F70	Boring Bars (Double Clamp)
A○○□- DSKN%L○○○○	F73	Boring Bars (Double Clamp)
A○○□- DTFN%L○○○○	F74	Boring Bars (Double Clamp)
A○○□- DWLN%L○○○○	F77	Boring Bars (Double Clamp)
A○○□- PCLNR○○○○	F68	Boring Bars
A○○□- PDUNR○○○○	F69	Boring Bars
A○○□- PTUNR○○○○	F75	Boring Bars
A○○□- PWLNR○○○○	F76	Boring Bars
A○○□- SCLC%L○○○○AE	F39	Boring Bars (Dynamic Bar)
A○○□- SCLC%L○○○○E	F88,P23	Boring Bars (Discontinued Description)
A○○□- SCLP%L○○○○AE	F41	Boring Bars (Dynamic Bar)
A○○□- SCLP%L○○○○E	F88,P23	Boring Bars (Discontinued Description)
A○○□- SDQC%L○○○○AE	F44	Boring Bars (Dynamic Bar)
A○○□- SDUC%L○○○○AE	F43	Boring Bars (Dynamic Bar)
A○○□- SDZC%L○○○○AE	F45	Boring Bars (Dynamic Bar)
A○○□- STLC%L○○○○AE	F47	Boring Bars (Dynamic Bar)
A○○□- STLP%L○○○○AE	F49	Boring Bars (Dynamic Bar)
A○○□- STUP%L○○○○E	F88,P23	Boring Bars (Discontinued Description)
A○○□- SVJB%L○○○○AE	F52	Boring Bars (Dynamic Bar)
A○○□- SVJC%L○○○○AE	F52	Boring Bars (Dynamic Bar)
A○○□- SVJP%L○○○○AE	F52	Boring Bars (Dynamic Bar)
A○○□- SVPB%L○○○○AE	F54	Boring Bars (Dynamic Bar)
A○○□- SVPC%L○○○○AE	F54	Boring Bars (Dynamic Bar)
A○○□- SVUB%L○○○○AE	F57	Boring Bars (Dynamic Bar)
A○○□- SVUC%L○○○○AE	F57	Boring Bars (Dynamic Bar)
A○○□- SVZB%L○○○○AE	F57	Boring Bars (Dynamic Bar)
A○○□- SVZC%L○○○○AE	F57	Boring Bars (Dynamic Bar)
A○○□- SWUB%L○○○○AE	F59	Boring Bars (Dynamic Bar)
A○○□- SWUP%L○○○○AE	F59	Boring Bars (Dynamic Bar)
AABSR ○○○○○(□)○F	E17,E46,P20	Toolholder (Back Turning)
AABWR ○○○○○(□)○F	E18,E19,E46,P20	Toolholder (Back Turning)
ABS ○○R○○○○	B94,E17	Insert (Back Turning)
ABS ○○R○○○○M	B94,E17	Insert (Back Turning)

T

Index

Description	Page	Category
ABW ○○R○○○○	<b>B94,E18,E19</b>	Insert (Back Turning)
ABW ○○R○○○○M	<b>B94,E18,E19</b>	Insert (Back Turning)
ACLCL%L ○○○○□-○○F	<b>E46,P21</b>	Toolholder (Turning/Discontinued Description)
ACLCL%L ○○○○□□-○○FF	<b>E22</b>	Toolholder (Turning)
AD○○□	<b>F66</b>	Boring Bars (AD Bar Adaptor)
ADJC%L ○○○○□-○○F	<b>E46,P21</b>	Toolholder (Turning/Discontinued Description)
ADJC%L ○○○○□□-○○FF	<b>E24</b>	Toolholder (Turning)
ADNCR ○○○○□-○○F	<b>E46,P21</b>	Toolholder (Turning/Discontinued Description)
AJ- ○x○○(-○.○)	<b>K25,P2</b>	Spare Parts (Adjusting screw / Chamfering Attachment)
AJ-412	<b>M36</b>	Spare Parts (Adjusting screw)
AJM5F	<b>N14,N15,N16</b>	Spare Parts (Axial adjustment screw)
AJM6	<b>N14</b>	Spare Parts (Axial adjustment screw)
AP-1416	<b>M158,M159</b>	Spare Parts (Cam Pin)
AP-1820	<b>M158,M159</b>	Spare Parts (Cam Pin)
APMT ○○○○○○E%L-NB○	<b>M18</b>	Insert (Milling)
APMT ○○○○○○ER-NB○P	<b>M18</b>	Insert (Milling)
AVJB%L ○○○○□-○○F	<b>E46,P21</b>	Toolholder (Turning/Discontinued Description)
AVJB%L ○○○○□□-○○FF	<b>E30</b>	Toolholder (Turning)
AVVB%L ○○○○□-○○F	<b>E46,P21</b>	Toolholder (Turning/Discontinued Description)
<b>B</b>		
BCS -○	<b>H27,P13</b>	Spare Parts (Clamp Set)
BDGT ○○○○○○FR-JA	<b>M18</b>	Insert (Milling)
BDMT ○○○○○○ER-JS	<b>M18</b>	Insert (Milling)
BDMT ○○○○○○ER-JT	<b>M18,M19</b>	Insert (Milling)
BDMT ○○○○○○ER-N○	<b>M19</b>	Insert (Milling)
BDMT ○○○○○○FR	<b>C35,M25</b>	Insert (Milling)
BGIAR ○○-○	<b>G63</b>	Blade (Grooving)
BH3X6	<b>F81,P2</b>	Spare Parts (Screw)
BH3X12	<b>D33,D34,D35,P2</b>	Spare Parts (Screw)
BH6X10TR	<b>G23,G24,G25,G76,G80,G81,H17,P2</b>	Spare Parts (Screw)
BH6X25	<b>G11,P2</b>	Spare Parts (Screw)
BH8X30	<b>P2</b>	Spare Parts (Screw)
BT○CK- M○○-○○	<b>M58</b>	BT Arbor (for Modular End Mill)
<b>C</b>		
○○□- SCLC%L○○-○○	<b>F90,P23</b>	Boring Bars (Discontinued Description)
○○□- SCLC%L○○-○○A	<b>F39</b>	Boring Bars (Dynamic Bar)
○○□- SCLC%L○○-○○AN	<b>F39</b>	Boring Bars (Dynamic Bar)
○○□- SCLC%L○○-○○AS	<b>F87</b>	Boring Bars (Assembly/AS) / Discontinued Description)
○○○○□- SCLCRO○-○○EZ	<b>F19</b>	Boring Bars (EZ Bar PLUS)
○○□- SCLP%L○○-○○	<b>F90,P23</b>	Boring Bars (Discontinued Description)
○○□- SCLP%L○○-○○○/○	<b>F90,P23</b>	Boring Bars (Discontinued Description)
○○□- SDUC%L○○-○○	<b>F90,P23</b>	Boring Bars (Discontinued Description)
○○□- SJLC%L○○-○○	<b>F46</b>	Boring Bars
○○□- SJZC%L○○-○○	<b>F46</b>	Boring Bars
○○□- STLB%L○○-○○A	<b>F49</b>	Boring Bars (Dynamic Bar)
○○□- STLB%L○○-○○AN	<b>F49</b>	Boring Bars (Dynamic Bar)
○○□- STLB%L○○-○○AN	<b>F90,P23</b>	Boring Bars (Discontinued Description)
○○□- STUP%L○○-○○	<b>F90,F91,P23</b>	Boring Bars (Discontinued Description)
○○□- STUP%L○○-○○○/○	<b>F90,F91,P23</b>	Boring Bars (Discontinued Description)
○○□- STUPRO○-○○AS	<b>F87</b>	Boring Bars (Assembly/AS) / Discontinued Description)
○○□- STXB%L○○-○○	<b>F51</b>	Boring Bars
○○□- STXP%L○○-○○	<b>F51</b>	Boring Bars
○○□- STZB%L○○-○○	<b>F51</b>	Boring Bars
○○□- SWUB%L○○-○○	<b>F91,P24</b>	Boring Bars (Discontinued Description)
○○□- SWUB%L○○-○○A	<b>F59</b>	Boring Bars (Dynamic Bar)
○○□- SWUB%L○○-○○AN	<b>F59</b>	Boring Bars (Dynamic Bar)
○○□- SWUB%L○○-○○AS	<b>F87</b>	Boring Bars (Assembly/AS) / Discontinued Description)
○○□- SWUB%L○○-○○○/○	<b>F91,P24</b>	Boring Bars (Discontinued Description)
○○□- SWUP%L○○-○○	<b>F91,P24</b>	Boring Bars (Discontinued Description)
○○□- SWUP%L○○-○○○/○	<b>F91,P24</b>	Boring Bars (Discontinued Description)
C09N	<b>M32,P15</b>	Spare Parts (Clamp)
C17R	<b>P15</b>	Spare Parts (Clamp)
C20R	<b>P15</b>	Spare Parts (Clamp)
C25R	<b>P15</b>	Spare Parts (Clamp)
C43R	<b>M40</b>	Spare Parts (Clamp)
C44R	<b>M40</b>	Spare Parts (Clamp)
C90SD ○○○○-12%L	<b>M158,M159</b>	Spare Parts (Cartridge)
C90SP ○○○○-10%L	<b>M158,M159</b>	Spare Parts (Cartridge)
C91R	<b>M94</b>	Spare Parts (Clamp)
C92R	<b>M94</b>	Spare Parts (Clamp)
CB-11	<b>D25,D34,D35,P16</b>	Spare Parts (Chipbreaker)
CB-12	<b>D26,F79,P16</b>	Spare Parts (Chipbreaker)
CB-13	<b>D26,F79,P16</b>	Spare Parts (Chipbreaker)

Description	Page	Category
CB-14	<b>D23,P16</b>	Spare Parts (Chipbreaker)
CB-15	<b>D23,P16</b>	Spare Parts (Chipbreaker)
CB-16	<b>D22,D23,F79,P16</b>	Spare Parts (Chipbreaker)
CB-17	<b>D22,P16</b>	Spare Parts (Chipbreaker)
CB-51	<b>D25,P16</b>	Spare Parts (Chipbreaker)
CB-S3220	<b>E42,P16</b>	Spare Parts (Chipbreaker)
CB-S4220	<b>E42,P16</b>	Spare Parts (Chipbreaker)
CBSN%L ○○○○□-○○	<b>D38</b>	Toolholder (Turning)
CBSN%L ○○○○B-12-A20	<b>F62</b>	Boring Bars (for Bearing Machining)
CB-T2212	<b>E43,P16</b>	Spare Parts (Chipbreaker)
CB-T3220	<b>E43,P16</b>	Spare Parts (Chipbreaker)
CCET ○○○○○○(○)F%L-USF	<b>B53</b>	Insert (Turning)
CCET ○○○○○○(○)MF%L-J	<b>B55</b>	Insert (Turning)
CCET ○○○○○○(○)MF%L-U	<b>B53</b>	Insert (Turning)
CCET ○○○○○○(○)MF%L-USF	<b>B53</b>	Insert (Turning)
CCET ○○○○○○(○)M%L-F	<b>B52</b>	Insert (Turning)
CCET ○○○○○○(○)M%L-FSF	<b>B51</b>	Insert (Turning)
CCET ○○○○○○(○)M%L-FSF	<b>B51</b>	Insert (Turning)
CCGT ○○○○○○	<b>B50</b>	Insert (Turning)
CCGT ○○○○○○AH	<b>B55</b>	Insert (Turning)
CCGT ○○○○○○E%L-U	<b>B54</b>	Insert (Turning)
CCGT ○○○○○○(○)F%L-U	<b>B53</b>	Insert (Turning)
CCGT ○○○○○○(○)M	<b>B50</b>	Insert (Turning)
CCGT ○○○○○○M-CF	<b>B49</b>	Insert (Turning)
CCGT ○○○○○○ME%L-U	<b>B54</b>	Insert (Turning)
CCGT ○○○○○○(○)MF	<b>B51</b>	Insert (Turning)
CCGT ○○○○○○MF-GF	<b>B49</b>	Insert (Turning)
CCGT ○○○○○○MF-GQ	<b>B49</b>	Insert (Turning)
CCGT ○○○○○○MFP-GF	<b>B49</b>	Insert (Turning)
CCGT ○○○○○○MFP-GQ	<b>B50</b>	Insert (Turning)
CCGT ○○○○○○MFP-SK	<b>B49</b>	Insert (Turning)
CCGT ○○○○○○(○)MF%L-U	<b>B54</b>	Insert (Turning)
CCGT ○○○○○○MP-CF	<b>B49</b>	Insert (Turning)
CCGT ○○○○○○MP-CK	<b>B49</b>	Insert (Turning)
CCGT ○○○○○○(○)M%L-F	<b>B52</b>	Insert (Turning)
CCGT ○○○○○○%L-A3	<b>B55</b>	Insert (Turning)
CCGT ○○○○○○(○)%L-F	<b>B52</b>	Insert (Turning)
CCGW ○○○○○○	<b>B55,C24</b>	Insert (Turning)
CCGW ○○○○○○NE	<b>C24</b>	Insert (Turning)
CCGW ○○○○○○SE	<b>C24</b>	Insert (Turning)
CCLN%L ○○○○□-○○	<b>D22,P20</b>	Toolholder (Turning)
CCLN%L ○○○○□-○○A	<b>D32,P20</b>	Toolholder (Turning)
CCLN%L ○○○○□-○○GX	<b>D28</b>	Toolholder (Turning)
CCMT ○○○○○○	<b>B50,C24</b>	Insert (Turning)
CCMT ○○○○○○GK	<b>B50</b>	Insert (Turning)
CCMT ○○○○○○HQ	<b>B50</b>	Insert (Turning)
CCMT ○○○○○○MQ	<b>B51</b>	Insert (Turning)
CCMT ○○○○○○NE	<b>C24</b>	Insert (Turning)
CCMT ○○○○○○PP	<b>B50</b>	Insert (Turning)
CCMT ○○○○○○SE	<b>C24</b>	Insert (Turning)
CCMT ○○○○○○WP	<b>B50</b>	Insert (Turning)
CCMW ○○○○○○MEF	<b>C14</b>	Insert (Turning)
CCMW ○○○○○○S○○○○○MES	<b>C14</b>	Insert (Turning)
CCMW ○○○○○○S○○○○○SET	<b>C14</b>	Insert (Turning)
CCMW ○○○○○○T○○○○○ME	<b>C14</b>	Insert (Turning)
CCMW ○○○○○○T○○○○○SE	<b>C14</b>	Insert (Turning)
CCMW ○○○○○○S○○○○○MET	<b>C14</b>	Insert (Turning)
CCRN%L ○○○○□-○○A	<b>D32</b>	Toolholder (Turning)
CDHN%L ○○○○□-○○GX	<b>D29</b>	Toolholder (Turning)
CDJN%L ○○○○□-○○	<b>D23</b>	Toolholder (Turning)
CDJN%L ○○○○□-○○GX	<b>D29</b>	Toolholder (Turning)
CE-010	<b>D22,D23,F79,P13</b>	Spare Parts (Clamp Set)
CE-020	<b>D25,D26,D34,D35,P13</b>	Spare Parts (Clamp Set)
CE-030	<b>D27,P13</b>	Spare Parts (Clamp Set)
CE-030A	<b>D25,D27,D32,D33,D34,D35,D36,P13</b>	Spare Parts (Clamp Set)
CE-040	<b>D25,D27,D35,P13</b>	Spare Parts (Clamp Set)
CE-111	<b>P15</b>	Spare Parts (Clamp)
CE-121	<b>P15</b>	Spare Parts (Clamp)
CE-131	<b>P15</b>	Spare Parts (Clamp)
CE-141	<b>P15</b>	Spare Parts (Clamp)
CE-220	<b>D22,D25,P13</b>	Spare Parts (Clamp Set)
CE-320	<b>F79,P13</b>	Spare Parts (Clamp Set)
CE-360S	<b>F81,P13</b>	Spare Parts (Clamp Set)
CE-410	<b>D28,D29,D30,D31,F80,P13</b>	Spare Parts (Clamp Set)



Description	Page	Category
CSRN% 0000□-00A	D34	Toolholder (Turning)
CSRN% 0000□-00GX	D30	Toolholder (Turning)
CSSN% 0000□-00	D25	Toolholder (Turning)
CSSN% 0000□-00A	D35	Toolholder (Turning)
CSSN% 0000□-00GX	D30	Toolholder (Turning)
CSSP% 0000□-00N	E42	Toolholder (Turning)
CSYN% 0000□-00	D25	Toolholder (Turning)
CSYN% 0000□-00A	D34	Toolholder (Turning)
CSYN% 0000□-00GX	D31	Toolholder (Turning)
CT00TO -45A	K21,K22,K23,K25	Insert (Drilling) / Chamfering
CTDPR 00CA00	N15	Toolholder (Cartridge)
CTEPR 00CA00	N15	Toolholder (Cartridge)
CTFP% 0000□-00N	E43	Toolholder (Turning)
CTFPR 00CA00	N15	Toolholder (Cartridge)
CTGP% 0000□-00N	E43	Toolholder (Turning)
CTJN% 0000□-00	D26	Toolholder (Turning)
CTJN% 0000□-00A	D36	Toolholder (Turning)
CTTP% 0000□-00N	E43,P22	Toolholder (Turning)
CTUN% 0000□-00	D26	Toolholder (Turning)
CTUN% 0000□-00A	D36,P20	Toolholder (Turning)
<b>D</b>		
DA 0000M-GM	K6,K7,K8	Insert (Drilling)
DC 0000M-SC	K18,K19,K20	Insert (Drilling)
DC-42	F67,P8	Spare Parts (Shim)
DC-44	D8,P8	Spare Parts (Shim)
DCET 00000(○)F%-JSF	B64	Insert (Turning)
DCET 00000(○)F%-USF	B62	Insert (Turning)
DCET 00000(○)MF%-J	B64	Insert (Turning)
DCET 00000(○)MF%-JSF	B64	Insert (Turning)
DCET 00000(○)MF%-U	B62	Insert (Turning)
DCET 00000(○)MF%-USF	B62	Insert (Turning)
DCET 00000(○)M%-F	B61	Insert (Turning)
DCET 00000(○)M%-FSF	B60	Insert (Turning)
DCET 00000(○)M%-FSF	B60	Insert (Turning)
DCGT 000000	B59	Insert (Turning)
DCGT 000000AH	B65	Insert (Turning)
DCGT 000000CF	B57	Insert (Turning)
DCGT 000000CK	B57	Insert (Turning)
DCGT 000000(○)E%-J	B65	Insert (Turning)
DCGT 000000E%-U	B63	Insert (Turning)
DCGT 000000(○)F%-J	B64	Insert (Turning)
DCGT 000000(○)F%-U	B62	Insert (Turning)
DCGT 000000(○)M	B59	Insert (Turning)
DCGT 000000M-CF	B57	Insert (Turning)
DCGT 000000M-CK	B57	Insert (Turning)
DCGT 000000(○)ME%-J	B65	Insert (Turning)
DCGT 000000ME%-U	B63	Insert (Turning)
DCGT 000000(○)MF	B59	Insert (Turning)
DCGT 000000MF-GF	B57	Insert (Turning)
DCGT 000000MF-GQ	B58	Insert (Turning)
DCGT 000000MFP-GF	B57	Insert (Turning)
DCGT 000000MFP-GQ	B58	Insert (Turning)
DCGT 000000MFP-SK	B57	Insert (Turning)
DCGT 000000(○)MF%-J	B64	Insert (Turning)
DCGT 000000(○)MF%-U	B63	Insert (Turning)
DCGT 000000MP-CF	B57	Insert (Turning)
DCGT 000000MP-CK	B58	Insert (Turning)
DCGT 000000(○)M%-F	B61	Insert (Turning)
DCGT 000000%-A3	B65	Insert (Turning)
DCGT 000000(○)M%-F	B61	Insert (Turning)
DCGW 000000	B65	Insert (Turning)
DCLN% 0000□-00	D8	Toolholder (Turning)
DCMT 000000	B59,C25	Insert (Turning)
DCMT 000000GK	B58	Insert (Turning)
DCMT 000000GP	B58	Insert (Turning)
DCMT 000000HQ	B59	Insert (Turning)
DCMT 000000MQ	B60	Insert (Turning)
DCMT 000000NE	C25	Insert (Turning)
DCMT 000000PP	B58	Insert (Turning)
DCMT 000000%-NE	C25	Insert (Turning)
DCMT 000000SE	C25	Insert (Turning)
DCMT 000000XP	B59	Insert (Turning)
DCMT 000000XQ	B59	Insert (Turning)
DCMW 000000MEF	C15	Insert (Turning)
DCMW 000000S00000MES	C15	Insert (Turning)

Description	Page	Category
DCMW 000000S00000MET	C15	Insert (Turning)
DCMW 000000S00000SET	C15	Insert (Turning)
DCMW 000000T00000ME	C15	Insert (Turning)
DCMW 000000T00000SE	C15	Insert (Turning)
DCMX 000000WP	B58	Insert (Turning)
DD-42	F70,P8	Spare Parts (Shim)
DD-42-16	F70,P8	Spare Parts (Shim)
DD-43	D10,P8	Spare Parts (Shim)
DD-44	D10,P8	Spare Parts (Shim)
DDJN% 0000□-0000	D10	Toolholder (Turning)
DDHN% 0000□-0000	D10	Toolholder (Turning)
DMC 0000	M109	End Mill
DMC 0000H	M111	End Mill
DMC 0000SX	M110	End Mill
DMC 0000SXT	M110	End Mill
DMC 0000SX-000	M110	End Mill
DMC 0000-S00	M109	End Mill
DN10	F67,F70,F73, F74,F77,P19	Spare Parts (Nozzle)
DN20	F67,F70,F73, F74,F77,P19	Spare Parts (Nozzle)
DNGA 000000ME4	C8	Insert (Turning)
DNGA 000000MEF	C8	Insert (Turning)
DNGA 000000S00000	B99	Insert (Turning)
DNGA 000000S00000ME	C8	Insert (Turning)
DNGA 000000S00000MEH	C8	Insert (Turning)
DNGA 000000S00000MEP	C8	Insert (Turning)
DNGA 000000S00000MET	C8	Insert (Turning)
DNGA 000000S00000SE	C9	Insert (Turning)
DNGA 000000S00000SET	C9	Insert (Turning)
DNGA 000000T00000	B99	Insert (Turning)
DNGA 000000T00000ME	C8	Insert (Turning)
DNGA 000000T00000SE	C9	Insert (Turning)
DNGG 000000AH	B27	Insert (Turning)
DNGG 000000FP-TK	B25	Insert (Turning)
DNGG 000000MFP-SK	B24	Insert (Turning)
DNGG 000000%	B27	Insert (Turning)
DNGG 000000%-A3	B27	Insert (Turning)
DNGG 000000%-S	B27	Insert (Turning)
DNGG 000000TK	B25	Insert (Turning)
DNGM 000000S00000BB0	C9	Insert (Turning)
DNGN 000000S00000	B99	Insert (Turning)
DNGN 000000T00000	B99	Insert (Turning)
DNGU 000000MER-U	B47	Insert (Turning)
DNGU 000000(○)MFR-F	B47	Insert (Turning)
DNGU 000000(○)MFR-U	B47	Insert (Turning)
DNGU 000000MF-SK	B47	Insert (Turning)
DNGU 000000MFP-SK	B47	Insert (Turning)
DNGX 000000T00000	B99	Insert (Turning)
DNMA 000000	B26	Insert (Turning)
DNMG 000000	B23	Insert (Turning)
DNMG 000000AH	B27	Insert (Turning)
DNMG 000000C	B26	Insert (Turning)
DNMG 000000CJ	B22	Insert (Turning)
DNMG 000000CQ	B22	Insert (Turning)
DNMG 000000GC	B26	Insert (Turning)
DNMG 000000GP	B21	Insert (Turning)
DNMG 000000GS	B22	Insert (Turning)
DNMG 000000GT	B23	Insert (Turning)
DNMG 000000HQ	B21	Insert (Turning)
DNMG 000000HS	B23	Insert (Turning)
DNMG 000000MQ	B25	Insert (Turning)
DNMG 000000MS	B25	Insert (Turning)
DNMG 000000MU	B25	Insert (Turning)
DNMG 000000PG	B22	Insert (Turning)
DNMG 000000PH	B24	Insert (Turning)
DNMG 000000PP	B21	Insert (Turning)
DNMG 000000PQ	B21	Insert (Turning)
DNMG 000000PS	B23	Insert (Turning)
DNMG 000000PT	B23	Insert (Turning)
DNMG 000000TK	B25	Insert (Turning)
DNMG 000000TN-V	B22	Insert (Turning)
DNMG 000000XF	B24	Insert (Turning)
DNMG 000000XP	B24	Insert (Turning)
DNMG 000000XQ	B24	Insert (Turning)
DNMG 000000XS	B24	Insert (Turning)

# Description Index

○ : Figure, □ : Alphabet

Description	Page	Category
DNMG □□□□□ZS	<b>B26</b>	Insert (Turning)
DNMM □□□□□M	<b>C23</b>	Insert (Turning)
DNMM □□□□□M-NE	<b>C23</b>	Insert (Turning)
DNMM □□□□□M-SE	<b>C23</b>	Insert (Turning)
DNMM □□□□□PX	<b>B24</b>	Insert (Turning)
DNMU □□□□□E-GK	<b>B47</b>	Insert (Turning)
DPET □□□□□(○)F%-USF	<b>B66</b>	Insert (Turning)
DPET □□□□□(○)MF%-USF	<b>B66</b>	Insert (Turning)
DPET □□□□□(○)M%-FSF	<b>B66</b>	Insert (Turning)
DPET □□□□□(○)F%-FSF	<b>B66</b>	Insert (Turning)
DR □□□□	<b>M142</b>	Spare Parts (Drive-Ring)
DR □□□□□	<b>M142</b>	Spare Parts (Drive-Ring)
DR □□□□□□□□	<b>M143</b>	Spare Parts (Drive-Ring)
DR □□□□□□□□□	<b>M143</b>	Spare Parts (Drive-Ring)
DR12CR-IN	<b>K63</b>	Cartridge (Drill)
DR12CR-OUT	<b>K63</b>	Cartridge (Drill)
DR20CR-IN	<b>K63</b>	Cartridge (Drill)
DR20CR-OUT	<b>K63</b>	Cartridge (Drill)
DS □□□□	<b>K53</b>	Insert (Drilling)
DS-42	<b>F73,P8</b>	Spare Parts (Shim)
DS-44	<b>D12,P8</b>	Spare Parts (Shim)
DSBN%L □□□□□□□□	<b>D12</b>	Toolholder (Turning)
DT-7	<b>G49,G50,K54,K56, K58,K60,M188,P17</b>	Spare Parts (Torx Wrench / Screwdriver type)
DT-8	<b>K56,K58,K60,M134, M138,M166,M190,P17</b>	Spare Parts (Torx Wrench / Screwdriver type)
DT-9	<b>K25</b>	Spare Parts (Torx Wrench / Screwdriver type)
DT-10	<b>K69,M45,M97,M134, M138,M166,M180, M181,M186,M188, M190,P17</b>	Spare Parts (Torx Wrench / Screwdriver type)
DT-15	<b>K25,K56,K58,K60,K62, M49,M101,M104,M105, M134,M138,M166,M180, M181,M190,P17</b>	Spare Parts (Torx Wrench / Screwdriver type)
DT-20	<b>K41,K43,K45,K46,K57, K58,K59,K60,K61,K62, K63,M97,M112,M166, M180,M181,P17</b>	Spare Parts (Torx Wrench / Screwdriver type)
DT-25	<b>K41,K43,K45,K46,K57, K59,K63,M181,P17</b>	Spare Parts (Torx Wrench / Screwdriver type)
DT-32	<b>D14,F74,P8</b>	Spare Parts (Shim)
DT-42	<b>F74,P8</b>	Spare Parts (Shim)
DTGN%L □□□□□□□□	<b>D14</b>	Toolholder (Turning)
DTM-6	<b>K40,K42,K44,K46,M72, M73,M134,M138,P17</b>	Spare Parts (Torx Wrench / Screwdriver type)
DTM-7	<b>K40,K42,K44,K46,P17</b>	Spare Parts (Torx Wrench / Screwdriver type)
DTM-8	<b>K40,K42,K44,K46, M62,M63,M64,M65, M80,M81,M83,P17</b>	Spare Parts (Torx Wrench / Screwdriver type)
DTM-10	<b>K40,K42,K44,K46,P17</b>	Spare Parts (Torx Wrench / Screwdriver type)
DTM-15	<b>K41,K42,K44,K46,M27, M63,M64,M65,M80,M81, M83,M91,P17</b>	Spare Parts (Torx Wrench / Screwdriver type)
DTP-9	<b>M158,M159,P17</b>	Spare Parts (Torx Plus Wrench / Screwdriver type)
DTP-15	<b>M34,M158,M159,P17</b>	Spare Parts (Torx Plus Wrench / Screwdriver type)
DTP-20	<b>M96,P17</b>	Spare Parts (Torx Plus Wrench / Screwdriver type)
DTPM-8	<b>M55,M56,M77,M78, M125,M177,P17</b>	Spare Parts (Torx Plus Wrench / Screwdriver type)
DTPM-10	<b>M175,M177,P17</b>	Spare Parts (Torx Plus Wrench / Screwdriver type)
DTPM-15	<b>M55,M56,M77,M78,M117, M119,M120,M170,M171, M175,M177,P17</b>	Spare Parts (Torx Plus Wrench / Screwdriver type)
DV-33	<b>D16,P8</b>	Spare Parts (Shim)
DVLN%L □□□□□□□□	<b>D16</b>	Toolholder (Turning)
DVPN%L □□□□□□□□	<b>D16</b>	Toolholder (Turning)
DW-42	<b>F77,P8</b>	Spare Parts (Shim)
DW-44	<b>D20,P8</b>	Spare Parts (Shim)
DWLN%L □□□□□□□□	<b>D20</b>	Toolholder (Turning)
DVVNN □□□□□□□□	<b>D16</b>	Toolholder (Turning)
<b>E</b>		
E□□□□- SCLC%L□□□□	<b>F90,P23</b>	Boring Bars (Discontinued Description)
E□□□□- SCLC%L□□□□A	<b>F39</b>	Boring Bars (Dynamic Bar)
E□□□□- SCLC%L□□□□A-○/○	<b>F39</b>	Boring Bars (Dynamic Bar)
E□□□□- SCLC%L□□□□AN	<b>F39</b>	Boring Bars (Dynamic Bar)
E□□□□- SCLCR□□□□AN○/○	<b>F39</b>	Boring Bars (Dynamic Bar)
E□□□□- SCLP%L□□□□	<b>F90,P23</b>	Boring Bars (Discontinued Description)
E□□□□- SCLP%L□□□□A	<b>F41</b>	Boring Bars (Dynamic Bar)
E□□□□- SCLP%L□□□□A-○/○	<b>F41</b>	Boring Bars (Dynamic Bar)
E□□□□- SCLP%L□□□□AN	<b>F41</b>	Boring Bars (Dynamic Bar)
E□□□□- SCLPR□□□□AN○/○	<b>F41</b>	Boring Bars (Dynamic Bar)
E□□□□- SDQC%L□□□□A	<b>F44</b>	Boring Bars (Dynamic Bar)
E□□□□- SDQC%L□□□□A-○/○	<b>F44</b>	Boring Bars (Dynamic Bar)
E□□□□- SDUC%L□□□□A	<b>F43</b>	Boring Bars (Dynamic Bar)
E□□□□- SDUC%L□□□□A-○/○	<b>F43</b>	Boring Bars (Dynamic Bar)
E□□□□- SDZC%L□□□□A	<b>F45</b>	Boring Bars (Dynamic Bar)
E□□□□- STLP%L□□□□A	<b>F49</b>	Boring Bars (Dynamic Bar)
E□□□□- STLP%L□□□□A-○/○	<b>F49</b>	Boring Bars (Dynamic Bar)
E□□□□- STLP%L□□□□AN	<b>F49</b>	Boring Bars (Dynamic Bar)
E□□□□- STLPR□□□□AN○/○	<b>F49</b>	Boring Bars (Dynamic Bar)
E□□□□- STUP%L□□□□	<b>F91,P23</b>	Boring Bars (Discontinued Description)
E□□□□- SVPBR□□□□A	<b>F54</b>	Boring Bars (Dynamic Bar)
E□□□□- SVPCR□□□□A	<b>F54</b>	Boring Bars (Dynamic Bar)
E□□□□- SVUBR□□□□A	<b>F57</b>	Boring Bars (Dynamic Bar)
E□□□□- SVUCR□□□□A	<b>F57</b>	Boring Bars (Dynamic Bar)
E□□□□- SWUB%L□□□□A	<b>F59</b>	Boring Bars (Dynamic Bar)
E□□□□- SWUB%L□□□□A-○/○	<b>F59</b>	Boring Bars (Dynamic Bar)
E□□□□- SWUB%L□□□□AN	<b>F59</b>	Boring Bars (Dynamic Bar)
E□□□□- SWUBR□□□□AN○/○	<b>F59</b>	Boring Bars (Dynamic Bar)
E□□□□- SWUP%L□□□□A	<b>F59</b>	Boring Bars (Dynamic Bar)
E□□□□- SWUP%L□□□□A-○/○	<b>F59</b>	Boring Bars (Dynamic Bar)
ENGN □□□□□□S□□□□□	<b>B99</b>	Insert (Turning)
ENGN □□□□□□T□□□□□	<b>B99</b>	Insert (Turning)
EZBR □□□□□□□□□NB	<b>C21,C33,F17</b>	EZ Bars (Boring)
EZBR □□□□□□□□□HP-□□□F	<b>F14</b>	EZ Bars (Boring)
EZBR □□□□□□□□□HP-□□□H	<b>F14</b>	EZ Bars (Boring)
EZBR □□□□□□□□□HP-□□□H-LT	<b>F15</b>	EZ Bars (Boring)
EZBR □□□□□□□□□ST-□□□F	<b>F16</b>	EZ Bars (Boring)
EZBR □□□□□□□□□ST-□□□H	<b>F16</b>	EZ Bars (Boring)
EZFGR □□□□□□□□□□	<b>G68</b>	EZ Bars (Internal Face Grooving)
EZGR □□□□□□□□□□	<b>G43</b>	EZ Bars (Internal Grooving)
EZGR □□□□□□□□□□S	<b>G43</b>	EZ Bars (Internal Grooving)
EZTR □□□□□□□□□□	<b>J24</b>	EZ Bars (Internal Threading)
EZH □□□□□□(○)CT-□□□	<b>F22,F23,F82</b>	Sleeve
EZH □□□□□□(○)HP-□□□	<b>F24,F25,F82</b>	Sleeve
EZH □□□□□□(○)ST-□□□	<b>F26,F27,F82</b>	Sleeve
EZVBR □□□□□□□□□□	<b>F20</b>	EZ Bars (Boring / Internal Facing / Copying)
<b>F</b>		
FDM- □□□	<b>K75</b>	Fine Micro Drill
FDM- □□□M(1)	<b>K73,K74</b>	Fine Micro Drill
FGG%L □□□□□□	<b>G31</b>	Insert (Grooving)
FH-2	<b>P17</b>	Spare Parts (Hexagon Wrench / Flag type)
FH-2.5	<b>P17</b>	Spare Parts (Hexagon Wrench / Flag type)
FMM □□□□	<b>G97</b>	Insert (Face Grooving)
FMN □	<b>G97</b>	Insert (Face Grooving)
FS- □□	<b>K25</b>	Spare Parts (Drill fitting screw for Chamfering Attachment)
FT-6	<b>P17</b>	Spare Parts (Torx Wrench / Flag type)
FT-7	<b>P17</b>	Spare Parts (Torx Wrench / Flag type)
FT-8	<b>P17</b>	Spare Parts (Torx Wrench / Flag type)
FT-10	<b>P17</b>	Spare Parts (Torx Wrench / Flag type)
FT-15	<b>P17</b>	Spare Parts (Torx Wrench / Flag type)
FTK ○	<b>G99</b>	Insert (Face Grooving)
FTS-15	<b>F65</b>	Spare Parts (Torx Wrench / Flag type)
FTP-5	<b>K9,K10,K11,K12, K13,K14,K15,P17</b>	Spare Parts (Torx Plus Wrench / Flag type)
FTP-6	<b>K9,K10,K11,K12,K13, K14,K15,M130,P17</b>	Spare Parts (Torx Plus Wrench / Flag type)
FTP-7	<b>K9,K10,K11,K12,K13, K14,K15,P17</b>	Spare Parts (Torx Plus Wrench / Flag type)
<b>G</b>		
GA □□	<b>G39</b>	Insert (Grooving)
GB □□%L□□□□	<b>C30,G10</b>	Insert (Grooving)
GB □□%L□□□□R	<b>G10</b>	Insert (Grooving)
GBA □□%L□□□□□□	<b>C20,C30,G6,G8</b>	Insert (Grooving)
GBA □□%L□□□□□□F	<b>G7</b>	Insert (Grooving)
GBA □□%L□□□□□□GM	<b>G7</b>	Insert (Grooving)
GBA □□%L□□□□□□MY	<b>G7</b>	Insert (Grooving)
GBA □□%L□□□□□□R	<b>G8</b>	Insert (Grooving)
GBA □□%L□□□□□□RF	<b>G8</b>	Insert (Grooving)

Description	Page	Category
E□□□□- SCLCR□□□□AN○/○	<b>F39</b>	Boring Bars (Dynamic Bar)
E□□□□- SCLP%L□□□□	<b>F90,P23</b>	Boring Bars (Discontinued Description)
E□□□□- SCLP%L□□□□A	<b>F41</b>	Boring Bars (Dynamic Bar)
E□□□□- SCLP%L□□□□A-○/○	<b>F41</b>	Boring Bars (Dynamic Bar)
E□□□□- SCLP%L□□□□AN	<b>F41</b>	Boring Bars (Dynamic Bar)
E□□□□- SCLPR□□□□AN○/○	<b>F41</b>	Boring Bars (Dynamic Bar)
E□□□□- SDQC%L□□□□A	<b>F44</b>	Boring Bars (Dynamic Bar)
E□□□□- SDQC%L□□□□A-○/○	<b>F44</b>	Boring Bars (Dynamic Bar)
E□□□□- SDUC%L□□□□A	<b>F43</b>	Boring Bars (Dynamic Bar)
E□□□□- SDUC%L□□□□A-○/○	<b>F43</b>	Boring Bars (Dynamic Bar)
E□□□□- SDZC%L□□□□A	<b>F45</b>	Boring Bars (Dynamic Bar)
E□□□□- STLP%L□□□□A	<b>F49</b>	Boring Bars (Dynamic Bar)
E□□□□- STLP%L□□□□A-○/○	<b>F49</b>	Boring Bars (Dynamic Bar)
E□□□□- STLP%L□□□□AN	<b>F49</b>	Boring Bars (Dynamic Bar)
E□□□□- STLPR□□□□AN○/○	<b>F49</b>	Boring Bars (Dynamic Bar)
E□□□□- STUP%L□□□□	<b>F91,P23</b>	Boring Bars (Discontinued Description)
E□□□□- SVPBR□□□□A	<b>F54</b>	Boring Bars (Dynamic Bar)
E□□□□- SVPCR□□□□A	<b>F54</b>	Boring Bars (Dynamic Bar)
E□□□□- SVUBR□□□□A	<b>F57</b>	Boring Bars (Dynamic Bar)
E□□□□- SVUCR□□□□A	<b>F57</b>	Boring Bars (Dynamic Bar)
E□□□□- SWUB%L□□□□A	<b>F59</b>	Boring Bars (Dynamic Bar)
E□□□□- SWUB%L□□□□A-○/○	<b>F59</b>	Boring Bars (Dynamic Bar)
E□□□□- SWUB%L□□□□AN	<b>F59</b>	Boring Bars (Dynamic Bar)
E□□□□- SWUBR□□□□AN○/○	<b>F59</b>	Boring Bars (Dynamic Bar)
E□□□□- SWUP%L□□□□A	<b>F59</b>	Boring Bars (Dynamic Bar)
E□□□□- SWUP%L□□□□A-○/○	<b>F59</b>	Boring Bars (Dynamic Bar)
ENGN □□□□□□S□□□□□	<b>B99</b>	Insert (Turning)
ENGN □□□□□□T□□□□□	<b>B99</b>	Insert (Turning)
EZBR □□□□□□□□□NB	<b>C21,C33,F17</b>	EZ Bars (Boring)
EZBR □□□□□□□□□HP-□□□F	<b>F14</b>	EZ Bars (Boring)
EZBR □□□□□□□□□HP-□□□H	<b>F14</b>	EZ Bars (Boring)
EZBR □□□□□□□□□HP-□□□H-LT	<b>F15</b>	EZ Bars (Boring)
EZBR □□□□□□□□□ST-□□□F	<b>F16</b>	EZ Bars (Boring)
EZBR □□□□□□□□□ST-□□□H	<b>F16</b>	EZ Bars (Boring)
EZFGR □□□□□□□□□□	<b>G68</b>	EZ Bars (Internal Face Grooving)
EZGR □□□□□□□□□□	<b>G43</b>	EZ Bars (Internal Grooving)
EZGR □□□□□□□□□□S	<b>G43</b>	EZ Bars (Internal Grooving)
EZTR □□□□□□□□□□	<b>J24</b>	EZ Bars (Internal Threading)
EZH □□□□□□(○)CT-□□□	<b>F22,F23,F82</b>	Sleeve
EZH □□□□□□(○)HP-□□□	<b>F24,F25,F82</b>	Sleeve
EZH □□□□□□(○)ST-□□□	<b>F26,F27,F82</b>	Sleeve
EZVBR □□□□□□□□□□	<b>F20</b>	EZ Bars (Boring / Internal Facing / Copying)
<b>F</b>		
FDM- □□□	<b>K75</b>	Fine Micro Drill
FDM- □□□M(1)	<b>K73,K74</b>	Fine Micro Drill
FGG%L □□□□□□	<b>G31</b>	Insert (Grooving)
FH-2	<b>P17</b>	Spare Parts (Hexagon Wrench / Flag type)
FH-2.5	<b>P17</b>	Spare Parts (Hexagon Wrench / Flag type)
FMM □□□□	<b>G97</b>	Insert (Face Grooving)
FMN □	<b>G97</b>	Insert (Face Grooving)
FS- □□	<b>K25</b>	Spare Parts (Drill fitting screw for Chamfering Attachment)
FT-6	<b>P17</b>	Spare Parts (Torx Wrench / Flag type)
FT-7	<b>P17</b>	Spare Parts (Torx Wrench / Flag type)
FT-8	<b>P17</b>	Spare Parts (Torx Wrench / Flag type)
FT-10	<b>P17</b>	Spare Parts (Torx Wrench / Flag type)
FT-15	<b>P17</b>	Spare Parts (Torx Wrench / Flag type)
FTK ○	<b>G99</b>	Insert (Face Grooving)
FTS-15	<b>F65</b>	Spare Parts (Torx Wrench / Flag type)
FTP-5	<b>K9,K10,K11,K12, K13,K14,K15,P17</b>	Spare Parts (Torx Plus Wrench / Flag type)
FTP-6	<b>K9,K10,K11,K12,K13, K14,K15,M130,P17</b>	Spare Parts (Torx Plus Wrench / Flag type)
FTP-7	<b>K9,K10,K11,K12,K13, K14,K15,P17</b>	Spare Parts (Torx Plus Wrench / Flag type)
<b>G</b>		
GA □□	<b>G39</b>	Insert (Grooving)
GB □□%L□□□□	<b>C30,G10</b>	Insert (Grooving)
GB □□%L□□□□R	<b>G10</b>	Insert (Grooving)
GBA □□%L□□□□□□	<b>C20,C30,G6,G8</b>	Insert (Grooving)
GBA □□%L□□□□□□F	<b>G7</b>	Insert (Grooving)
GBA □□%L□□□□□□GM	<b>G7</b>	Insert (Grooving)
GBA □□%L□□□□□□MY	<b>G7</b>	Insert (Grooving)
GBA □□%L□□□□□□R	<b>G8</b>	Insert (Grooving)
GBA □□%L□□□□□□RF	<b>G8</b>	Insert (Grooving)

T

?

Index

Description	Page	Category
GBF ○○%L○○○-○○○	<b>G12</b>	Insert (Grooving)
GDFM ○○○○N-○○○CM	<b>G75</b>	Insert (Face Grooving)
GDFM ○○○○N-○○○DM	<b>G75</b>	Insert (Face Grooving)
GDFM ○○○○N-○○○GH	<b>G75</b>	Insert (Face Grooving)
GDFM ○○○○N-○○○GM	<b>G75</b>	Insert (Face Grooving)
GDFMS ○○○○N-○○○DM	<b>G75</b>	Insert (Face Grooving)
GDG ○○○○N-○○○GS	<b>G19</b>	Insert (Grooving)
GDG ○○○○N-○○○PG	<b>H12</b>	Insert (Cut-Off)
GDG ○○○○R-○○○PG-○○D	<b>H12</b>	Insert (Cut-Off)
GDGS ○○○○N-○○○NB	<b>C20,C31,G20</b>	Insert (Grooving)
GDM ○○○○N-○○○GM	<b>G19</b>	Insert (Grooving)
GDM ○○○○N-○○○GMI	<b>G59</b>	Insert (Grooving)
GDM ○○○○N-○○○GL	<b>G19</b>	Insert (Grooving)
GDM ○○○○N-○○○PF	<b>H12</b>	Insert (Cut-Off)
GDM ○○○○N-○○○PH	<b>G19,H13</b>	Insert (Grooving / Cut-Off)
GDM ○○○○N-○○○PM	<b>H13</b>	Insert (Cut-Off)
GDM ○○○○N-○○○PQ	<b>H12</b>	Insert (Cut-Off)
GDM ○○○○N-○○○R-CM	<b>G19,G59</b>	Insert (Grooving)
GDM ○○○○%L-○○○PF-○○D	<b>H12</b>	Insert (Cut-Off)
GDM ○○○○R-○○○PM-○○D	<b>H13</b>	Insert (Cut-Off)
GDM ○○○○R-○○○PQ-○○D	<b>H12</b>	Insert (Cut-Off)
GDMS ○○○○N-○○○GM	<b>G19</b>	Insert (Grooving)
GDMS ○○○○N-○○○PH	<b>G19,H13</b>	Insert (Grooving / Cut-Off)
GDMS ○○○○N-○○○PM	<b>H13</b>	Insert (Cut-Off)
GDMS ○○○○R-○○○PM-○○D	<b>H13</b>	Insert (Cut-Off)
GE%L ○○○-○○○□	<b>G47,G48</b>	Insert (Grooving)
GER ○○○-○○○□□	<b>G47,G48</b>	Insert (Grooving)
GFV%L ○○○○□-○○○(○)□	<b>G90</b>	Toolholder (Face Grooving)
GFVS%L ○○○○□-○○○AA	<b>G88,P25</b>	Toolholder (Face Grooving)
GFVS%L ○○○○□-H□	<b>G92</b>	Toolholder (Face Grooving)
GFVS%L ○○○○□-○○○(○)□	<b>G92,G93</b>	Toolholder (Face Grooving)
GFVT%L ○○○○□-○○AA	<b>G88,P25</b>	Toolholder (Face Grooving)
GFVT%L ○○○○□-○○○(○)□	<b>G92,G93</b>	Toolholder (Face Grooving)
GFVT%L ○○○○□-H□	<b>G92</b>	Toolholder (Face Grooving)
GH ○○○○(○)-○○	<b>B107,G39,G61</b>	Insert (Grooving)
GHU ○○-○○	<b>G39,G61</b>	Insert (Grooving)
GIA ○○	<b>G63</b>	Insert (Grooving)
GIFV%L ○○○○B-○○○□	<b>G100</b>	Toolholder (Face Grooving)
GIV%L ○○○○-○○(□)	<b>G55</b>	Toolholder (Internal Grooving)
GIV%L ○○○○-○○E	<b>G55</b>	Toolholder (Internal Grooving)
GIV%L ○○○○-○○W	<b>G55</b>	Toolholder (Internal Grooving)
GMG ○○○○-○○○MG	<b>G30,G62,G98</b>	Insert (Grooving)
GMG ○○○○-○○○MS	<b>G30</b>	Insert (Grooving)
GMG ○○○○-○○○R	<b>G30</b>	Insert (Grooving)
GMG ○○○○-○○○RU	<b>G30</b>	Insert (Grooving)
GMGA ○○○○-○○○R	<b>G31,G62,G98</b>	Insert (Grooving)
GMM 3014-04	<b>G31</b>	Insert (Grooving)
GMM 3014-15R	<b>G31</b>	Insert (Grooving)
GMM 3014-15RU	<b>G31</b>	Insert (Grooving)
GMM ○○○○-MT	<b>G32,H20</b>	Insert (Grooving / Cut-Off)
GMM ○○○○-NB	<b>G32,H20</b>	Insert (Grooving / Cut-Off)
GMM ○○○○%L-MT-15D	<b>G32,H20</b>	Insert (Cut-Off)
GMM ○○○○%L-TK-8D	<b>G32,H20</b>	Insert (Cut-Off)
GMM ○○○○%L-TMR-6D	<b>H20</b>	Insert (Cut-Off)
GMM ○○○○-TK	<b>G32,H20</b>	Insert (Cut-Off)
GMM ○○○○-TMR	<b>H20</b>	Insert (Cut-Off)
GMM ○○○○-○○○MS	<b>G30</b>	Insert (Grooving)
GMM ○○○○-○○○MW	<b>G30,G62,G98</b>	Insert (Grooving)
GMM ○○○○-○○○R	<b>G30</b>	Insert (Grooving)
GMM ○○○○-○○○V	<b>G60</b>	Insert (Grooving)
GMM ○○○○-○○○VR	<b>G60</b>	Insert (Grooving)
GMN ○(○)	<b>C20,C30,G32,G33,H20</b>	Insert (Grooving)
GMN ○-TK	<b>G32,H20</b>	Insert (Cut-Off)
GM%L ○-TK-8D	<b>G32,H20</b>	Insert (Cut-Off)
GM%L ○(○)-○(○)D	<b>G32,H20</b>	Insert (Cut-Off)
GMGW ○○○○-○○R	<b>C31,G40</b>	Insert (Grooving)
GMGW ○○○○-○○R-HR	<b>C31,G40</b>	Insert (Grooving)
GOMT ○○○○○○ER-D	<b>M19</b>	Insert (Milling)
GP-1	<b>K56,K58,K60,P19</b>	Spare Parts (Plug)
GP-2	<b>K56,K57,K58,K59,K60,K61,K62,P19</b>	Spare Parts (Plug)
GS-50	<b>G16,G36,G57,G59,G60,J22,J23,P2</b>	Spare Parts (Screw)
GS-50S	<b>P2</b>	Spare Parts (Screw)
GS-4090T%LW	<b>P2</b>	Spare Parts (Screw)
GV%L ○○○-○○○□(□)	<b>C30,G53,M193</b>	Insert (Grooving)

Description	Page	Category
GVF%L ○○○-○○○AA	<b>G89</b>	Insert (Face Grooving)
GVF%L ○○○-○○○□	<b>C30,G95,M194</b>	Insert (Face Grooving)
GVF%L ○○○-○○○□R	<b>G95</b>	Insert (Face Grooving)
<b>H</b>		
HA○○ PCLN%L12-○○	<b>F63</b>	Boring Bars (AD Bar Interchangeable Head)
HA○○ PDUN%L15-○○	<b>F64</b>	Boring Bars (AD Bar Interchangeable Head)
HA○○ PTFN%L16-○○	<b>F64</b>	Boring Bars (AD Bar Interchangeable Head)
HA○○ SCLC%L09-○○	<b>F65</b>	Boring Bars (AD Bar Interchangeable Head)
HA○○ SDUC%L11-○○	<b>F65</b>	Boring Bars (AD Bar Interchangeable Head)
HF20X53H	<b>M64,P2</b>	Spare Parts (Screw with Coolant Hole)
HF24X60H	<b>M64,P2</b>	Spare Parts (Screw with Coolant Hole)
HH3X6	<b>F85,P2</b>	Spare Parts (Screw)
HH3X12	<b>D32,D33,D34,D35,D36,F85,P2</b>	Spare Parts (Screw)
HH4X12	<b>G93,K63,P3</b>	Spare Parts (Screw)
HH4X16	<b>M44,P2</b>	Spare Parts (Screw)
HH5X15	<b>G63,P2</b>	Spare Parts (Screw)
HH5X16	<b>D23,G21,G22,G34,G35,G36,G37,G82,H14,H16,H22,H23,P2</b>	Spare Parts (Screw)
HH5X20	<b>F66,G96,G97,P2</b>	Spare Parts (Screw)
HH5X25	<b>G22,G34,G35,G36,G37,G96,G97,H16,H22,H23,H27,P2</b>	Spare Parts (Screw)
HH5X30	<b>F66,P2</b>	Spare Parts (Screw)
HH6X12	<b>K63,P2</b>	Spare Parts (Screw)
HH6X16	<b>N14,N15,N16,P2</b>	Spare Parts (Screw)
HH6X20	<b>F66,G39,G62,N15,N16,P2</b>	Spare Parts (Screw)
HH6X25	<b>G22,G34,G38,G40,G61,G98,H22,P2</b>	Spare Parts (Screw)
HH6X30	<b>F66,H27,P2</b>	Spare Parts (Screw)
HH8X25	<b>M34,M55,M78,M81,M175,N14,P2</b>	Spare Parts (Screw)
HH8X25H	<b>M64,M73,P2</b>	Spare Parts (Screw with Coolant Hole)
HH8X30	<b>N14</b>	Spare Parts (Screw)
HH8X35	<b>P2</b>	Spare Parts (Screw)
HH8X40	<b>P2</b>	Spare Parts (Screw)
HH8X50	<b>P2</b>	Spare Parts (Screw)
HH8X55	<b>P2</b>	Spare Parts (Screw)
HH8X65	<b>P2</b>	Spare Parts (Screw)
HH8X70	<b>P2</b>	Spare Parts (Screw)
HH8X80	<b>P2</b>	Spare Parts (Screw)
HH8X85	<b>P2</b>	Spare Parts (Screw)
HH8X100	<b>P2</b>	Spare Parts (Screw)
HH8X110	<b>P2</b>	Spare Parts (Screw)
HH10X25	<b>M181,P3</b>	Spare Parts (Screw)
HH10X30	<b>M27,M55,M78,M81,M91,M117,M170,M175,P3</b>	Spare Parts (Screw)
HH10X30H	<b>M64,M73,P3</b>	Spare Parts (Screw with Coolant Hole)
HH10X30M	<b>M34,P3</b>	Spare Parts (Screw)
HH10X30S	<b>M34,M38,M40,M96,P3</b>	Spare Parts (Screw)
HH10X35	<b>M147,P3</b>	Spare Parts (Screw)
HH10X40	<b>M81,P3</b>	Spare Parts (Screw)
HH12X25	<b>P3</b>	Spare Parts (Screw)
HH12X35	<b>M27,M32,M46,M49,M55,M78,M81,M82,M83,M91,M101,M104,M117,M147,M158,M159,M170,M175,M181,P3</b>	Spare Parts (Screw)
HH12X35H	<b>M64,P3</b>	Spare Parts (Screw with Coolant Hole)
HH12X35M	<b>M34,M38,M40,M96,P3</b>	Spare Parts (Screw)
HH12X40	<b>M82,M83,M104,P3</b>	Spare Parts (Screw)
HH12X55	<b>P3</b>	Spare Parts (Screw)
HH12X65	<b>P3</b>	Spare Parts (Screw)
HH12X80	<b>P3</b>	Spare Parts (Screw)
HH12X85	<b>P3</b>	Spare Parts (Screw)
HH12X100	<b>P3</b>	Spare Parts (Screw)
HH12X110	<b>P3</b>	Spare Parts (Screw)
HH12X120	<b>P3</b>	Spare Parts (Screw)
HH12X130	<b>P3</b>	Spare Parts (Screw)
HH12X140	<b>P3</b>	Spare Parts (Screw)
HH12X150	<b>P3</b>	Spare Parts (Screw)
HH16X35	<b>M158,M159,P3</b>	Spare Parts (Screw)

Description	Page	Category
HH16X40	M32,M82,M83, M117,P3	Spare Parts (Screw)
HH16X45	M78,M81,M101, M104,P3	Spare Parts (Screw)
HH16X52H	M64,P3	Spare Parts (Screw with Coolant Hole)
HH16X65	P3	Spare Parts (Screw)
HH16X90	P3	Spare Parts (Screw)
HH16X110	P3	Spare Parts (Screw)
HH16X130	P3	Spare Parts (Screw)
HH20X40	M82,M83,M147,P3	Spare Parts (Screw)
HH20X55	M101,P3	Spare Parts (Screw)
HH20X75	P3	Spare Parts (Screw)
HH20X90	P3	Spare Parts (Screw)
HH20X110	P3	Spare Parts (Screw)
HH20X120	P3	Spare Parts (Screw)
HH20X140	P3	Spare Parts (Screw)
HH20X150	P3	Spare Parts (Screw)
HH20X170	P3	Spare Parts (Screw)
HH24X40	P3	Spare Parts (Screw)
HH24X60	P3	Spare Parts (Screw)
HH24X75	P3	Spare Parts (Screw)
HH24X90	P3	Spare Parts (Screw)
HH24X110	P3	Spare Parts (Screw)
HH24X120	P3	Spare Parts (Screw)
HH24X140	P3	Spare Parts (Screw)
HH24X150	P3	Spare Parts (Screw)
HH24X170	P3	Spare Parts (Screw)
HPB%	○○○○-○○○	2-Edge Tip-Bars (Boring)
HPBR	○○○○-○○○NB	2-Edge Tip-Bars (Boring)
HPBT%	○○○○-○○○	2-Edge Tip-Bars (Back Boring)
HPF%	○○○○-○○	2-Edge Tip-Bars (Internal Face Grooving)
HPG%	○○○○-○○	2-Edge Tip-Bars (Internal Grooving)
HPTR	○○○○○-○○-○○○	2-Edge Tip-Bars (Internal Threading)
HS-2524TRP	K9,K10,K11,K12, K13,K14,K15,P4	Spare Parts (Screw)
HS-2534TRP	K9,K10,K11,K12, K13,K14,K15,P4	Spare Parts (Screw)
HS-3048TRP	K9,K10,K11,K12, K13,K14,K15,P4	Spare Parts (Screw)
HS-4067TRP	K9,K10,K11,K12, K13,K14,K15,P4	Spare Parts (Screw)
HS3X4	F30,F32,F84,P4	Spare Parts (Screw)
HS3X4P	F22,F24,F27,P4	Spare Parts (Screw)
HS3X8	P4	Spare Parts (Screw)
HS3X12	P4	Spare Parts (Screw)
HS3X16	P4	Spare Parts (Screw)
HS4X4	F84,F85,N14, N15,N16,P4	Spare Parts (Screw)
HS4X4P	F22,F24,F27,P4	Spare Parts (Screw)
HS5X5	F85,N14,N15,N16,P4	Spare Parts (Screw)
HS6X4P	F84,G51,P4	Spare Parts (Screw)
HS6X6	F85,P4	Spare Parts (Screw)
HS6X14	F85,P4	Spare Parts (Screw)
HS6X22	F85,P4	Spare Parts (Screw)
HS8X10	N10,P4	Spare Parts (Screw)
HS8X12	N10,P4	Spare Parts (Screw)
HS10X10	F85,P4	Spare Parts (Screw)
HS10X16	N10,P4	Spare Parts (Screw)
HS12X12	N10,P4	Spare Parts (Screw)
HS12X16	N10,P4	Spare Parts (Screw)
HS12X18	N10,P4	Spare Parts (Screw)
HS12X20	N10,P4	Spare Parts (Screw)
HS12X25	N3,P4	Spare Parts (Screw)
HS12X30	N3,N4,P4	Spare Parts (Screw)
HS12X35	N4,P4	Spare Parts (Screw)
HS16X12	N10,P4	Spare Parts (Screw)
HS16X18	N10,P4	Spare Parts (Screw)
HS16X20	N10,P4	Spare Parts (Screw)
HSB4X8%	E17,E18,E19, E22,E24,E30,P4	Spare Parts (Screw)
<b>J</b>		
JCET	○○○○○M%-F	B67 Insert (Turning)
JCET	○○○○○M%-FSF	B67 Insert (Turning)
JCET	○○○○○%-FSF	B67 Insert (Turning)
JCGT	○○○○○M%-F	B67 Insert (Turning)

Description	Page	Category
JCGT	○○○○○M%-F	B67 Insert (Turning)
JOMT	○○○○○ER-D	M19 Insert (Milling)
<b>K</b>		
KFMS%	○○○○□○○(○)○○(○)-8	G98 Toolholder (Face Grooving)
KFMS%	○○○○□○○(○)○○(○)-○	G96,G97 Toolholder (Face Grooving)
KFTB%	○○○○○(○)-○S	G99 Blade (Face Grooving)
KGA%	○○○○□-○	G39 Toolholder (Grooving)
KGB%	○○○○□-○○	G11 Toolholder (Grooving)
KGB%	○○○○□22-○○	G11 Toolholder (Grooving)
KGBA%	○○○○□-○○	G9 Toolholder (Grooving)
KGBA%	○○○○□22-○○	G9 Toolholder (Grooving)
KGBA%	○○○○□22-○○T5	G9 Toolholder (Grooving)
KGBAS%	○○○○□-○○	G9 Toolholder (Grooving)
KGBAS%	○○○○□22-○○	G9 Toolholder (Grooving)
KGBAS%	○○○○□22-○○T5	G9 Toolholder (Grooving)
KGBF%	○○○○□□-○○F	G13 Toolholder (Grooving)
KGBS%	○○○○□-○○	G11 Toolholder (Grooving)
KGBS%	○○○○□22-○○	G11 Toolholder (Grooving)
KGDF%	-○○(○)-○○□-C	G78,G79,G80,G81, G83,G84,G85 Blade (Face Grooving)
KGDF%	○○○○X○○(○)-○○S	G78,G79,G80,G81 Toolholder (Face Grooving)
KGDF%	○○○○□○○(○)-○○B-Z	G82 Toolholder (Face Grooving)
KGDI%	○○○○□-○	G59 Toolholder (Internal Grooving)
KGD%	○○○○-C	G23,G24,G25,H17 Blade (Grooving / Cut-Off)
KGD%	○○○○-C	G23,G25,G78,G79, G80,G81,H17 Toolholder Body (Grooving / Cut-Off)
KGD%	○○○○□(□)-○○(○)T○○	G22,H16 Toolholder (Grooving / Cut-Off)
KGD%	○○○○□(□)-○○(○)	G21,H14 Toolholder (Grooving / Cut-Off)
KGD%	○○○○□□-○○(○)D○○	G21,H14 Toolholder (Grooving / Cut-Off)
KGD%	○○○○X-○○T○○S	G23,H17 Toolholder (Grooving / Cut-Off)
KGDS%	○○○○-C	G24,G25,G83,G84 Toolholder (Grooving)
KGDS%	○○○○X-○○(○)B	H15 Toolholder (Cut-Off)
KGDS%	○○○○X-○○T○○S	G24 Toolholder (Grooving)
KGH%	○○○○□-○○(○)	G38 Toolholder (Grooving)
KGHS%	○○○○□-○	G38,P25 Toolholder (Grooving)
KGIAR	○○H	G63 Toolholder (Internal Grooving / Toolholder Body)
KGIAR	○○○○B-○	G63 Toolholder (Internal Grooving)
KGM%	○○○○□-○	G34,H22,P25 Toolholder (Grooving)
KGM%	○○○○□-○○T○○	G35,H23 Toolholder (Grooving)
KGM%	○○○○□-○○(○)-○○(○)	G34,G108,H22,H30,P25 Toolholder (Grooving)
KGM%	○○○○□□-○○(○)	G34,H22 Toolholder (Grooving)
KGMM%	○○○○□-○	G36 Toolholder (Grooving)
KGMS%	○○○○□-○	G36 Toolholder (Grooving)
KGMU%	○○○○□	G37 Toolholder (Grooving)
KGMW%	○○○○□-○	G40 Toolholder (Grooving)
KIGBA%	○○○○-○○	G56 Toolholder (Internal Grooving)
KIGHR	○○○○B-○	G61 Toolholder (Grooving)
KIGM%	○○○○B-○	G62 Toolholder (Internal Grooving)
KIGM%	○○○○B-○V	G60 Toolholder (Internal Grooving)
KIGMUR	○○○○B-○	G62 Toolholder (Internal Grooving)
KITG%	○○○○T-○○	G57,J23 Toolholder (Internal Grooving / Threading)
KN91%	44-○	P25 Toolholder (Grooving / Discontinued Description)
KNMX	○○○○○M%-1	B28 Insert (Turning)
KPS-42		E42,F60,P8 Spare Parts (Shim)
KPT-32		E43,F61,P8 Spare Parts (Shim)
KPT-42		M95,P8 Spare Parts (Shim)
KTG%	○○○○□-○○	G16 Toolholder (Grooving)
KTG%	○○○○□22-○○	G16 Toolholder (Grooving)
KTGF%	○○○○□-○○□	G14,G108 Toolholder (Grooving)
KTGF%	○○○○□(□)-○○F	G14,P25 Toolholder (Grooving)
KTKB	○○-○○S	H26 Blade (Cut-Off)
KTKB	○○-○○S	H26 Blade (Cut-Off)
KTKB%	○○-○○S	H26 Blade (Cut-Off)
KTKF%	○○○○□(□)-○○	E12,E48,H8, H30,J18,P20 Toolholder (Back Turning / Cut-Off / Threading)
KTKFS%	○○○○□-○○□	H10 Toolholder (Cut-Off)
KTKH%	○○○○□-○○S	H28,P25 Toolholder (Cut-Off)
KTKH%	○○○○□-○○T○○S	H28 Toolholder (Cut-Off)
KTKH%	○○○○□-○○(○)-○○B	H30,P25 Toolholder (Cut-Off)
KTKH%	○○○○□-○○-○○S	H30 Toolholder (Cut-Off)
KTKTB	○○-○○	H27 Block (Cut-Off)
KTKTBF	○○-○○	H27 Block (Cut-Off)
KTN%	○○○○□(□)-○○	J16 Toolholder (Threading)
KTNSR	○○○○□-○○	J16 Toolholder (Threading)
KTT%	○○○○□-○○	J22 Toolholder (Threading)



Description	Page	Category
KTXR ○○○○□(□)-○○F	<b>J20,P25</b>	Toolholder (Threading)
KVN-32	<b>D18,P8</b>	Spare Parts (Shim)
<b>L</b>		
LC-4K	<b>F63,P9</b>	Spare Parts (Shim)
LC-32N	<b>D8,F68,P9</b>	Spare Parts (Shim)
LC-42N	<b>D8,E40,N5,P9</b>	Spare Parts (Shim)
LC-42N-20	<b>D8,P9</b>	Spare Parts (Shim)
LC-42N%/	<b>F68,P9</b>	Spare Parts (Shim)
LC-42N%/-20	<b>P9</b>	Spare Parts (Shim)
LC-53N	<b>D8,P9</b>	Spare Parts (Shim)
LCP025097	<b>F22</b>	Spare Parts (Adjustment Pin)
LCP025140	<b>F24</b>	Spare Parts (Adjustment Pin)
LD-4K	<b>F64,P9</b>	Spare Parts (Shim)
LD-4K43	<b>F64,P9</b>	Spare Parts (Shim)
LD-32N	<b>D11,F69,P9</b>	Spare Parts (Shim)
LD-42	<b>D11,F72,N5,N6,P9</b>	Spare Parts (Shim)
LD-42-20	<b>D11,F72,N5,N6,P9</b>	Spare Parts (Shim)
LD-43	<b>D11,P9</b>	Spare Parts (Shim)
LD-43-20	<b>D11,P9</b>	Spare Parts (Shim)
LGBA-16%/S	<b>G9,G56,N9,P14</b>	Spare Parts (Clamp Set)
LGBA-22%/S	<b>G9,G56,N9,P14</b>	Spare Parts (Clamp Set)
LL-03N	<b>D14,N14,P7</b>	Spare Parts (Lock Pin)
LL-03SN	<b>F68,F75,F76,P7</b>	Spare Parts (Lock Pin)
LL-03TN	<b>D14,F75,P7</b>	Spare Parts (Lock Pin)
LL-05C	<b>D19,P7</b>	Spare Parts (Lock Pin)
LL-1CN	<b>D19,D37,P7</b>	Spare Parts (Lock Pin)
LL-1DN	<b>D11,F69,P7</b>	Spare Parts (Lock Pin)
LL-1K	<b>F64,P7</b>	Spare Parts (Lock Pin)
LL-1N	<b>D8,D12,D13,D14,D19, D20,E41,F68,F75,F76, N6,N14,P7</b>	Spare Parts (Lock Pin)
LL-2C	<b>D37,P7</b>	Spare Parts (Lock Pin)
LL-2K	<b>F63,P7</b>	Spare Parts (Lock Pin)
LL-2N	<b>D8,D12,D13,D14, D19,D20,E40,F68, F78,N5,N7,N14,P7</b>	Spare Parts (Lock Pin)
LL-3K	<b>F64,P7</b>	Spare Parts (Lock Pin)
LL-3N	<b>D11,F72,N5,N6,P7</b>	Spare Parts (Lock Pin)
LL-4	<b>D11,P7</b>	Spare Parts (Lock Pin)
LL-5N	<b>D8,P7</b>	Spare Parts (Lock Pin)
LNEU ○○○○-○○(-○)	<b>M148</b>	Insert (Milling)
LNEU ○○○○-○○S(-○)	<b>M148</b>	Insert (Milling)
LOF07R	<b>M36</b>	Spare Parts (Cartridge)
LOGU ○○○○○○ER-GM	<b>M13</b>	Insert (Milling)
LOMU ○○○○○○ER-GH	<b>M13</b>	Insert (Milling)
LOMU ○○○○○○ER-GM	<b>M13</b>	Insert (Milling)
LOMU ○○○○○○ER-SM	<b>M13</b>	Insert (Milling)
LPGT ○○○○○○ER-GM	<b>M13</b>	Insert (Milling)
LP-2S	<b>D18,P7</b>	Spare Parts (Lock Pin)
LP-6S	<b>D18,P7</b>	Spare Parts (Lock Pin)
LPA-11	<b>E17,E18,E19,P7</b>	Spare Parts (Anchor Pin)
LPA-13	<b>E17,E18,E19,P7</b>	Spare Parts (Anchor Pin)
LPA-17	<b>E17,E18,E19,P7</b>	Spare Parts (Anchor Pin)
LPF-11	<b>E22,E24,E30,P7</b>	Spare Parts (Anchor Pin)
LPF-13	<b>E22,E24,P7</b>	Spare Parts (Anchor Pin)
LPF-17	<b>E22,E24,P7</b>	Spare Parts (Anchor Pin)
LPF-1113	<b>E30,P7</b>	Spare Parts (Anchor Pin)
LPF-1117	<b>E30,P7</b>	Spare Parts (Anchor Pin)
LR-10C	<b>D19,P9</b>	Spare Parts (Shim)
LR-12C	<b>D19,D37,P9</b>	Spare Parts (Shim)
LR-16C	<b>D37,P9</b>	Spare Parts (Shim)
LR-80	<b>D19,P9</b>	Spare Parts (Shim)
LR-81	<b>D19,P9</b>	Spare Parts (Shim)
LS-03N	<b>D14,N14,P4</b>	Spare Parts (Lock Screw)
LS-03SN	<b>D14,F68,F75,F76,P4</b>	Spare Parts (Lock Screw)
LS-05	<b>D19,P4</b>	Spare Parts (Lock Screw)
LS-1N	<b>D8,D11,D12,D13,D 14,D19,D20,D37,E 41,F75,N6,N14,P4</b>	Spare Parts (Lock Screw)
LS-1P	<b>F64,P4</b>	Spare Parts (Lock Screw)
LS-1SN	<b>F68,F69,F76,P4</b>	Spare Parts (Lock Screw)
LS-1T	<b>D37,P4</b>	Spare Parts (Lock Screw)
LS-2N	<b>D8,D11,D12,D13,D14, D19,D20,E40,F68,F72, F78,N5,N6,N7,N14,P4</b>	Spare Parts (Lock Screw)

Description	Page	Category
LS-2P	<b>F63,P4</b>	Spare Parts (Lock Screw)
LS-3	<b>D11,P4</b>	Spare Parts (Lock Screw)
LS-3P	<b>F64,P4</b>	Spare Parts (Lock Screw)
LS-4N	<b>D8,P4</b>	Spare Parts (Lock Screw)
LS-11	<b>D18,P4</b>	Spare Parts (Lock Screw)
LS-15	<b>D18,P4</b>	Spare Parts (Lock Screw)
LS-32	<b>D12,D13,P9</b>	Spare Parts (Shim)
LS-42	<b>D12,D13,N14,P9</b>	Spare Parts (Shim)
LSD-445R	<b>P12</b>	Spare Parts (Cartridge)
LSE-445R	<b>P12</b>	Spare Parts (Cartridge)
LSE-445SR	<b>M40</b>	Spare Parts (Cartridge)
LSO-445R	<b>M44,P12</b>	Spare Parts (Cartridge)
LSP-1	<b>D8,D11,D12,D13, D14,D19,D20,D37, E41,F68,F69,F75, F76,N6,N14,P7</b>	Spare Parts (Shim Pin)
LSP-2	<b>D8,D11,D12,D13, D14,D19,D20,D37, E40,F68,F72,F78, N5,N6,N7,N14,P7</b>	Spare Parts (Shim Pin)
LSP-2K	<b>F64,P7</b>	Spare Parts (Shim Pin)
LSP-3	<b>D8,P7</b>	Spare Parts (Shim Pin)
LSP-3K	<b>F63,F64,P7</b>	Spare Parts (Shim Pin)
LSP-415R	<b>P12</b>	Spare Parts (Cartridge)
LT-3K	<b>F64,P9</b>	Spare Parts (Shim)
LT-32N	<b>D14,E41,F75,N6,N14,P9</b>	Spare Parts (Shim)
LT-32N-20	<b>D14,E41,F75,N6,P9</b>	Spare Parts (Shim)
LT-42N	<b>D14,N14,P9</b>	Spare Parts (Shim)
LT-42N-20	<b>D14,P9</b>	Spare Parts (Shim)
LTE-490R	<b>P12</b>	Spare Parts (Cartridge)
LTE-490SR	<b>M94</b>	Spare Parts (Cartridge)
LTK-5	<b>G99,H28,P18</b>	Spare Parts (Wrench)
LTP-10	<b>F64,P17</b>	Spare Parts (Torx Plus Wrench / L-shaped type)
LTP-15	<b>F63,F64,P17</b>	Spare Parts (Torx Plus Wrench / L-shaped type)
LTW-8SS	<b>E39,P17</b>	Spare Parts (Torx Wrench / L-shaped type)
LTW-10S	<b>E12,F30,F33,F34, F35,G72,G73,H8, H10,H18,P17</b>	Spare Parts (Torx Wrench / L-shaped type)
LTW-10SS	<b>E38,P17</b>	Spare Parts (Torx Wrench / L-shaped type)
LTW-15S	<b>G21,G34,H14, H15,H22,P17</b>	Spare Parts (Torx Wrench / L-shaped type)
LTW-20	<b>E23,F62,G21,G34,G35, G36,G59,G60,H14,H16, H22,H23,M186,P17</b>	Spare Parts (Torx Wrench / L-shaped type)
LTW-25	<b>G23,G24,G25,G76, G80,G81,H17,P17</b>	Spare Parts (Torx Wrench / L-shaped type)
LW-1.5	<b>P18</b>	Spare Parts (Hexagon Wrench / L-shaped type)
LW-2	<b>P18</b>	Spare Parts (Hexagon Wrench / L-shaped type)
LW-2.5	<b>P18</b>	Spare Parts (Hexagon Wrench / L-shaped type)
LW-3	<b>P18</b>	Spare Parts (Hexagon Wrench / L-shaped type)
LW-4	<b>P18</b>	Spare Parts (Hexagon Wrench / L-shaped type)
LW-4.5	<b>M96,P18</b>	Spare Parts (Hexagon Wrench / L-shaped type)
LW-5	<b>P18</b>	Spare Parts (Hexagon Wrench / L-shaped type)
LW-6	<b>P18</b>	Spare Parts (Hexagon Wrench / L-shaped type)
LW-8	<b>P18</b>	Spare Parts (Hexagon Wrench / L-shaped type)
LW-10	<b>P18</b>	Spare Parts (Hexagon Wrench / L-shaped type)
LW-14	<b>P18</b>	Spare Parts (Hexagon Wrench / L-shaped type)
LW-17	<b>P18</b>	Spare Parts (Hexagon Wrench / L-shaped type)
LW-19	<b>P18</b>	Spare Parts (Hexagon Wrench / L-shaped type)
LW-32N	<b>D20,F76,P9</b>	Spare Parts (Shim)
LW-42N	<b>D20,N7,P9</b>	Spare Parts (Shim)
LW-42N%/	<b>F78,P9</b>	Spare Parts (Shim)
<b>M</b>		
M3X 8	<b>D22,D23,D25,D26, D27,D28,D29,D30, D31,D33,D34,D35, F79,F80,P4</b>	Spare Parts (Screw)
M3X12	<b>D22,D25,D26,D27, D33,D34,D35,F79,P4</b>	Spare Parts (Screw)
M4X10	<b>D22,D25,D27,D30,D31,P4</b>	Spare Parts (Screw)
MAP-1806	<b>M49</b>	Spare Parts (Cartridge)
MAP-1806M	<b>M101</b>	Spare Parts (Cartridge)
MAP-1806S	<b>M101</b>	Spare Parts (Cartridge)
MAP-2506	<b>M104,M105,P12</b>	Spare Parts (Shim)
MCSE ○○○	<b>M186</b>	End Mill (Chamfering)

# Description Index

○ : Figure, □ : Alphabet

Description	Page	Category
MCSE ○○○○-○○D	M186	End Mill (Chamfering)
MEA ○○-S○○○(-○○○)	P26	End Mill (MEA / Discontinued Description)
MEAL ○○-S○○	M112	End Mill (for Aluminum Machining)
MEB ○○-S○○	P26	End Mill (MEB / Discontinued Description)
MEC ○○-M○○○-○○(T)-○T	M65	Modular type Head (MEC)
MEC ○○-S○○○-○○	M62,M63	End Mill (MEC)
MEC ○○-S○○○-○○T	M62	End Mill (MEC)
MEC ○○-S○○○-○○○-○○	M63	End Mill (MEC)
MEC ○○-S○○○-○○○-○○○-○○	M63	End Mill (MEC)
MEC ○○-S○○○-○○○-○○T	M62	End Mill (MEC)
MEC ○○-S○○○-○○○-○○T-○	M63	End Mill (MEC)
MEC ○○-W○○○-○○○○	M63	End Mill (MEC)
MEC ○○-W○○○-○○○-○○-H	M63	End Mill (MEC)
MEC ○○○R-○○○-○○-M	M64	Face Mill (MEC)
MEC ○○○R-○○○-○○(○)□□	M64	Face Mill (MEC)
MECH ○○○-S○○○-○○○-○○T	M80	End Mill (MECH)
MECH ○○○R-○○○-○○T	M81	End Mill (MECH)
MECH ○○○R-○○○-○○T-M	M81	Shell Mill (MECH)
MECH ○○○R○○○-○○○-BT○○	M81	End Mill (MECH)
MECH ○○○R○○○-○○○-BT○○-A	M82,M83	End Mill (MECH)
MECH ○○○R○○○-○○○-BT○○SA	M82,M83	End Mill (MECH)
MECH ○○○R○○○-○○○-T-F	M82,M83	End Mill (MECH)
MECX ○○-S○○○-○○○-○T	M72	End Mill (MECX)
MECX ○○-S○○○-○○○-○○-○T	M72	End Mill (MECX)
MECX ○○○R-○○○-○○(○)T-M	M73	Face Mill (MECX)
MEF ○○-S○○	M188	End Mill (Countersinking)
METS ○○-S○○	M190	End Mill (T-Slotting)
METS ○○-S○○-H	M190	End Mill (T-Slotting)
MEW ○○-M○○○-○○○-○T	M56	Modular type Head (MEW)
MEW ○○-S○○○-○○○-○T	M54	End Mill (MEW)
MEW ○○-S○○○-○○○-○○○-○T	M54	End Mill (MEW)
MEW ○○-W○○○-○○○-○T	M54	End Mill (MEW)
MEW ○○○R-○○○-○○○-○T	M55	Face Mill (MEW)
MEWH ○○○R-○○○-○○○-○T-M	M78	Shell Mill (MEWH)
MEWH ○○○-S○○○-○○○-○○○-○T	M77	End Mill (MEWH)
MEWH ○○○-W○○○-○○○-○○○-○T	M77	End Mill (MEWH)
MEY ○○-S○○	M134	End Mill (3-D End Mill)
MEY ○○-S○○○-○○○	M134	End Mill (3-D End Mill)
MEY ○○-S○○○-○○○-H	M134	End Mill (3-D End Mill)
MEZ ○○-S○○○G	M138	End Mill (3-D End Mill)
MEZ ○○-S○○○-○○○G	M138	End Mill (3-D End Mill)
MEZ ○○-S○○○-○○○HG	M138	End Mill (3-D End Mill)
MFH ○○-M○○○-○○○-○T	M120,M125	Modular type Head (MFH)
MFH ○○-S○○○-○○○-○T	M118,M119,M124,M130	End Mill (MFH)
MFH ○○-S○○○-○○○-○○○-○T	M118,M124	End Mill (MFH)
MFH ○○-W○○○-○○○-○T	M118,M124,M130	End Mill (MFH)
MFH ○○○R-○○○-○○T	M116	Face Mill (MFH)
MFH ○○○R-○○○-○○T-M	M116	Face Mill (MFH)
MFH ○○○R-○○○-○○T-○○M	M116	Face Mill (MFH)
MFK ○○○R-○○○-○○(○)T	M32	Face Mill (MFK)
MFK ○○○R-○○○-○○(○)T-M	M32	Face Mill (MFK)
MFPN-45	M27,P9	Spare Parts (Shim)
MFPN ○○○○○R-○○(○)T	M26	Face Mill (MFPN)
MFPN ○○○○○R-○○(○)T-M	M26	Face Mill (MFPN)
MFPN ○○○○○R-S32-○T	M27	End Mill (MFPN)
MFWN-90	M91,P9	Spare Parts (Shim)
MFWN ○○○○○R-○○(○)T	M90	Face Mill (MFWN)
MFWN ○○○○○R-○○(○)T-M	M90	Face Mill (MFWN)
MFWN ○○○○○R-S○○○-○T	M91	Face Mill (MFWN)
MGI ○○○○-1□□	M192	End Mill (Grooving for M/C)
MHD ○○-○RF	P28	Helical Radius End Mill (Discontinued Description)
MHD ○○(○)-BT50-A	P28	Helical End Mill (Discontinued Description)
MHD ○○(○)-BT50-SA	P28	Helical End Mill (Discontinued Description)
MHD ○○(○)-F	P27,P28	Helical End Mill (Discontinued Description)
MHD ○○(○)-FMA-A	P28	Helical End Mill (Discontinued Description)
MHD ○○(○)-FMA-SA	P28	Helical End Mill (Discontinued Description)
MHD ○○-S○○○-○RSA	P28	Helical Radius End Mill (Discontinued Description)
MHD ○○-S○○○-A(-○○○)	P27,P28	Helical End Mill (Discontinued Description)
MHD ○○-S○○○-B	P27	Helical End Mill (Discontinued Description)
MHD ○○(S)-S○○○-C	P27	Helical End Mill (Discontinued Description)
MHD ○○-S○○○-SA	P27	Helical End Mill (Discontinued Description)
MHD ○○-S○○○-SB	P27	Helical End Mill (Discontinued Description)
MOF ○○○○○R-○○○-○○(○)T	M34	Face Mill
MOF ○○○○○R-○○○-○○(○)T-M	M34	Face Mill
MOFX ○○○○○R-○○○-○○(○)T-SF	M36	Face Mill
MOFX ○○○○○R○○○-○○(○)T-MSF	M36	Face Mill

Description	Page	Category
MP-1	M27,M49,M55,M56,M65,M77,M78,M80,M81,M83,M91,M101,M104,M105,M117,M119,M120,M125,M130,M134,M147,M158,M159,M166,M170,M171,M175,M177	Spare Parts (Anti-seize Compound)
MRF ○○-S○○	M166	End Mill (Ball-Nose)
MRF ○○-S○○○-○○○	M166	End Mill (Ball-Nose)
MRFW ○○-S○○	M166	End Mill (Ball-Nose)
MRFW ○○-S○○○-○○○	M166	End Mill (Ball-Nose)
MRP ○○○R-○○	M181,P27	Face Mill (Radius Mill)
MRP ○○○R-○○○-○T	M181,P27	Face Mill (Radius Mill)
MRP ○○○-S○○○-○○	M180	End Mill (Radius Mill)
MRP ○○○-S○○○-○○○-○T	M180	End Mill (Radius Mill)
MRP ○○○○-S○○○-○○○-○T-○○○	M180	End Mill (Radius Mill)
MRP ○○○○-S○○○-○○○-○○○	M180	End Mill (Radius Mill)
MRW ○○-S○○○-○○○-○T	M171	End Mill (MRW)
MRW ○○-S○○○-○○○-○T-○○○	M171	End Mill (MRW)
MRW ○○-W○○○-○○○-○T	M171	End Mill (MRW)
MRW ○○○R-○○○-○○(○)T	M170	Face Mill (MRW)
MRW ○○○R-○○○-○○(○)T-M	M170	Face Mill (MRW)
MRX ○○-M○○○-○○○-○T	M177	Modular type Head (MRX)
MRX ○○-S○○○-○○○-○T	M176	End Mill (MRX)
MRX ○○-S○○○-○○○-○○○-○T	M176	End Mill (MRX)
MRX ○○-W○○○-○○○-○T	M176	End Mill (MRX)
MRX ○○○R-○○○-○T	M175	Face Mill (MRX)
MRX ○○○R-○○○-○T-M	M175	Face Mill (MRX)
MSD-42	M43,P9	Spare Parts (Shim)
MSD 45○○	M43	Face Mill (with Shank)
MSD 45○○-32	M43	Face Mill (with Shank)
MSD 45○○(○)R	P26	Face Mill (Discontinued Description)
MSE 15○○	M51	Face Mill (with Shank)
MSE 15○○-32	M51	Face Mill (with Shank)
MSE-4215	M51,P9	Spare Parts (Shim)
MSE-4245	M39,P9	Spare Parts (Shim)
MSE-4245S	M38,P9	Spare Parts (Shim)
MSE 45○○	M39	Face Mill (with Shank)
MSE 45○○-32	M39	Face Mill (with Shank)
MSE 45○○○R-○○(○)T	M38	Face Mill
MSE 45○○○R-○○(○)T-M	M38	Face Mill
MSE 45○○○R-○T-M-SF	M40	Face Mill
MSE 45○○○R-○T-SF	M40	Face Mill
MS-FRW1	M142,M143	Spare Parts (Wrench / for MSTA)
MSO 45○○-S	M44	Face Mill (with Shank)
MSO 45○○-S32-09	M45	Face Mill (with Shank)
MSO 45○○○R	M44	Face Mill
MSO 45○○○R-09	P26	Face Mill (Discontinued Description)
MSO 90○○-S32-○○	M97	Face Mill (with Shank)
MSO 90○○○R-○○	P26	Face Mill (Discontinued Description)
MSO 90○○○R-○○○-○○(○)T	M96	Face Mill
MSO 90○○○R-○○○-○○(○)T-M	M96	Face Mill
MSO-4T245	M44,P10	Spare Parts (Shim)
MSO-5200	M96,P10	Spare Parts (Shim)
MSP 15○○	M51	Face Mill (with Shank)
MSP 15○○(○)R	P26	Face Mill (Discontinued Description)
MSP-42	M51,P10	Spare Parts (Shim)
MSR ○○○R-○	M104	Face Mill
MSR ○○○R-○M	M104	Face Mill
MSR ○○○R-○-31.75	M104	Face Mill
MSR ○○○R-BT50-○	M105	Face Mill (Integral Arbor type)
MSRS 15○○○R-○○(○)□	M48	Face Mill
MSRS 15○○○R-○○(○)□-M	M48	Face Mill
MSRS 90○○○R-○○○-○○(○)□	M100	Face Mill
MSRS 90○○○R-○○○-○○(○)□-M	M100	Face Mill
MSTA ○○(○)□○○○-○○(○)T	M142	Slot Mill
MSTA ○○□○○○○-○○(○)T	M143	Slot Mill
MSTB ○○○(○)□○○○○-○T	M146,M147	Slot Mill
MSTB ○○○(○)□○○○○-○T	M146	Slot Mill
MSTC ○○○□○○○○-○○○-○○	M152,M154,M156	Slot Mill
MSTC ○○○□○○○○-○○○-○○(○)T	M152,M153,M154,M155,M156,M157	Slot Mill
MT- ○	K25	Spare Parts (Screw / Insert mounting screw)
MTE-42	M95,P10	Spare Parts (Shim)
MTE 90○○	M95	Face Mill (with Shank)
MTE 90○○-32	M95	Face Mill (with Shank)
MTE 90○○(○)R	P26	Face Mill (Discontinued Description)

T

?

Index

Description	Page	Category
MTE 90○○○R-OT-SF	<b>M94,P26</b>	Face Mill
MTES ○○○	<b>M113</b>	End Mill
MTP 90○○	<b>M95</b>	Face Mill (with Shank)
MTPS ○○○	<b>M113</b>	End Mill
MVG ○○○○	<b>M194,P28</b>	End Mill (Ring Grooving for M/C)
MVLN%L ○○○○□-○○	<b>D17</b>	Toolholder (Turning)
MVN-32	<b>D17,P10</b>	Spare Parts (Shim)
MVVNN ○○○○□-○○	<b>D17</b>	Toolholder (Turning)
<b>N</b>		
NDCT ○○○○○FR	<b>M20</b>	Insert (Milling)
NDCT ○○○○○TR	<b>M20</b>	Insert (Milling)
NDCT ○○○○○TRX	<b>M20</b>	Insert (Milling)
NDCW ○○○○○FRX	<b>C35,M20,M25</b>	Insert (Milling)
NDCW ○○○○○FRX-NE	<b>C35,M25</b>	Insert (Milling)
NDCW ○○○○○TR	<b>M20</b>	Insert (Milling)
NDCW ○○○○○TRX	<b>M20</b>	Insert (Milling)
NDMM ○○○○○ER-N○	<b>M20</b>	Insert (Milling)
NDMM ○○○○○ER-T	<b>M20</b>	Insert (Milling)
NDMM ○○○○○ER-SP	<b>M20</b>	Insert (Milling)
NDMT ○○○○○ER-D	<b>M20</b>	Insert (Milling)
NDMT ○○○○○ER-DH	<b>M20</b>	Insert (Milling)
NEMT ○○○○○ER-D	<b>M20</b>	Insert (Milling)
NEMT ○○○○○ER-DH	<b>M20</b>	Insert (Milling)
<b>O</b>		
OFMR ○○○○○EN-GT	<b>M21</b>	Insert (Milling)
OFMR ○○○○○EN-SH	<b>M21</b>	Insert (Milling)
OFMT ○○○○○EN-GT	<b>M21</b>	Insert (Milling)
OFMT ○○○○○E□-SH	<b>M21</b>	Insert (Milling)
<b>P</b>		
P-03	<b>D14,N14,P7</b>	Spare Parts (Shim Pin)
P-03S	<b>D14,F68,F75,F76,P7</b>	Spare Parts (Shim Pin)
PC-1	<b>D8,D11,D12,D13,D14,D19, D20,D37,E41,F68,F69,F75, F76,N6,N14,P19</b>	Spare Parts (Punch)
PC-2	<b>D8,D11,D12,D13,D14,D19, D20,D37,E40,F68,F72,F78, N5,N6,N7,N14,P19</b>	Spare Parts (Punch)
PC-2K	<b>F63,F64</b>	Spare Parts (Punch)
PCLN%L ○○○○□-○○	<b>D8</b>	Toolholder (Turning)
PCLNR ○○○○□-○○FF	<b>E40</b>	Toolholder (Double Sided Tooling)
PD-42	<b>F72,P10</b>	Spare Parts (Shim)
PDHN%L ○○○○□-○○	<b>D11</b>	Toolholder (Turning)
PDJN%L ○○○○□-○○	<b>D11</b>	Toolholder (Turning)
PDJN%L ○○○○□-○○U	<b>D11</b>	Toolholder (Turning)
PH ○○○○-○○	<b>F84</b>	Sleeve (for Tip-Bars)
PNEA ○○○○XNTN-T01020	<b>M14</b>	Insert (Milling)
PNEG ○○○○XNEN-GL	<b>M14</b>	Insert (Milling)
PNEG ○○○○XNER-W	<b>M14</b>	Insert (Milling)
PNEG ○○○○XNTR-T00515	<b>M14</b>	Insert (Milling)
PNEU ○○○○ANEL-GL	<b>M15</b>	Insert (Milling)
PNEU ○○○○ANER-GL	<b>M15</b>	Insert (Milling)
PNEU ○○○○ANER-W	<b>M15</b>	Insert (Milling)
PNMG ○○○○XNEN-GH	<b>M14</b>	Insert (Milling)
PNMG ○○○○XNEN-GM	<b>M14</b>	Insert (Milling)
PNMU ○○○○ANER-GH	<b>M15</b>	Insert (Milling)
PNMU ○○○○ANEL-GM	<b>M15</b>	Insert (Milling)
PNMU ○○○○ANER-GM	<b>M15</b>	Insert (Milling)
PNMU ○○○○ANER-SM	<b>M15</b>	Insert (Milling)
PP-4	<b>F72,P7</b>	Spare Parts (Lock Pin)
PRGC%L ○○○○□-○○	<b>D19</b>	Toolholder (Turning)
PRGC%L ○○○○□-○○BE	<b>D37,P20</b>	Toolholder (Turning)
PRGC%L ○○○○□-○○BF	<b>D37,P20</b>	Toolholder (Turning)
PRGN%L ○○○○□-○○	<b>D19</b>	Toolholder (Turning)
PRXC%L ○○○○□-○○	<b>D19</b>	Toolholder (Turning)
PSB%L ○○○○-○○NBS	<b>C21,C34,F37</b>	Tip-Bars (Boring)
PSB%L ○○○○-○○S	<b>F37</b>	Tip-Bars (Boring)
PSBN%L ○○○○□-○○	<b>D12</b>	Toolholder (Turning)
PSBT%L ○○○○-○○S	<b>F37</b>	Tip-Bars (Boring)
PSDNN ○○○○□-○○	<b>D13</b>	Toolholder (Turning)
PSFG%L ○○○○-○○S	<b>G71</b>	Tip-Bars (Face Grooving)
PSG%L ○○○○-○○S	<b>G46</b>	Tip-Bars (Internal Grooving)
PSH ○○○○(○)-○○(○)	<b>P22</b>	Sleeve (for 2-Edge Tip-Bars / Discontinued Description)
PSKNR ○○CA○○	<b>N14</b>	Toolholder (Cartridge)

Description	Page	Category
PSKN%L ○○○○□-○○	<b>D12</b>	Toolholder (Turning)
PSSNR ○○CA○○	<b>N14</b>	Toolholder (Cartridge)
PSSN%L ○○○○□-○○	<b>D13</b>	Toolholder (Turning)
PSTR ○○○○-○○S	<b>J30</b>	Tip-Bars (Threading)
PSYNR ○○CA○○	<b>N14</b>	Toolholder (Cartridge)
PTFNR ○○CA○○	<b>N14</b>	Toolholder (Cartridge)
PTFN%L ○○○○□-○○	<b>D14</b>	Toolholder (Turning)
PTGNR ○○CA○○	<b>N14</b>	Toolholder (Cartridge)
PTGN%L ○○○○□-○○	<b>D14</b>	Toolholder (Turning)
PTLNR ○○○○□-○○FF	<b>E41</b>	Toolholder (Double Sided Tooling)
PTTNR ○○CA○○	<b>N14</b>	Toolholder (Cartridge)
PVLN%L ○○○○□-○○Q	<b>D18</b>	Toolholder (Turning)
PVPN%L ○○○○□-○○Q	<b>D18</b>	Toolholder (Turning)
PVVNN ○○○○□-○○Q	<b>D18</b>	Toolholder (Turning)
PWLN%L ○○○○□-○○	<b>D20</b>	Toolholder (Turning)
<b>R</b>		
RBG ○○K○○○○○	<b>B106</b>	Insert (Turning)
RCGX ○○○○M0-AQ	<b>B68</b>	Insert (Turning)
RCGX ○○○○○E○○	<b>B106</b>	Insert (Turning)
RCGX ○○○○○P○○○○○	<b>B106</b>	Insert (Turning)
RCGX ○○○○○S○○○○○	<b>B106</b>	Insert (Turning)
RCGX ○○○○○T○○○○○	<b>B106</b>	Insert (Turning)
RCMT ○○○○M0-BB	<b>B95</b>	Insert (Turning)
RCMX ○○○○M0	<b>B68</b>	Insert (Turning)
RDFG ○○FR	<b>M21</b>	Insert (Milling)
RDGT ○○○○M0ER-GM	<b>M16</b>	Insert (Milling)
RDGT ○○○○M0ER-SM	<b>M16</b>	Insert (Milling)
RDHX ○○○○M0T	<b>M21</b>	Insert (Milling)
RDMT ○○○○M0EN-GH	<b>M16</b>	Insert (Milling)
RDMT ○○○○M0ER-GM	<b>M16</b>	Insert (Milling)
RDMT ○○○○M0-H	<b>M21</b>	Insert (Milling)
RNGN ○○○○○E○○○	<b>B100</b>	Insert (Turning)
RNGN ○○○○○K○○○○○	<b>B100</b>	Insert (Turning)
RNGN ○○○○○S○○○○○	<b>B100</b>	Insert (Turning)
RNGN ○○○○○T○○○○○	<b>B100</b>	Insert (Turning)
RNMG ○○○○○○	<b>B28</b>	Insert (Turning)
RNMN ○○○○○S○○○○○	<b>C19</b>	Insert (Turning)
ROMU ○○○○M0ER-GH	<b>M16</b>	Insert (Milling)
ROMU ○○○○M0ER-GM	<b>M16</b>	Insert (Milling)
ROMU ○○○○M0ER-SM	<b>M16</b>	Insert (Milling)
RPGN ○○○○○E○○○	<b>B105</b>	Insert (Turning)
RPGN ○○○○○T○○○○○	<b>B105</b>	Insert (Turning)
RPGT ○○○○M0ER-GM	<b>M16</b>	Insert (Milling)
RPGT ○○○○M0ER-SM	<b>M16</b>	Insert (Milling)
RPGX ○○○○○E○○○	<b>B106</b>	Insert (Turning)
RPGX ○○○○○T○○○○○	<b>B106</b>	Insert (Turning)
RPMT ○○○○M0	<b>M21</b>	Insert (Milling)
RPMT ○○○○M0-BB	<b>B95,F62</b>	Insert (Turning)
RPMT ○○○○M0EN-GH	<b>M16</b>	Insert (Milling)
RPMT ○○○○M0ER-GM	<b>M16</b>	Insert (Milling)
RPMT ○○○○M0-H	<b>M21</b>	Insert (Milling)
<b>S</b>		
SOO- CH○○	<b>K21,K22,K23,K24</b>	Toolholder ("MagicDrill" / Chamfering Attachment)
SOO- DRS○○○○○	<b>K54</b>	Toolholder ("MagicDrill")
SOO- DRW○○○○○M-○-06	<b>K68,K69</b>	Toolholder ("MagicDrill")
SOO- DRX○○○M-○-○○	<b>K40,K41,K42,K43, K44,K45,K46</b>	Toolholder ("MagicDrill")
SOO- DRZ○○○○○-○○CR	<b>K63</b>	Toolholder ("MagicDrill")
SOO- DRZ○○○○(○○)-○○	<b>K56,K57,K58,K59, K60,K61,K62</b>	Toolholder ("MagicDrill")
SOO□- CCLN%L○○-○○A	<b>F81,P24</b>	Boring Bars
SOO□- CCLN%L○○-○○GX	<b>F80</b>	Boring Bars
SOO□- CDUN%L○○-○○GX	<b>F80</b>	Boring Bars
SOO□- CELNR○○-○○	<b>F79</b>	Boring Bars
SOO□- CSKN%L○○-○○	<b>F79</b>	Boring Bars
SOO□- CSKN%L○○-○○A	<b>P24</b>	Boring Bars (Discontinued Description)
SOO□- CSKN%L○○-○○GX	<b>F80</b>	Boring Bars
SOO□- CSKPR○○-○○	<b>F60</b>	Boring Bars
SOO□- CTUC%L○○-○○	<b>P24</b>	Boring Bars (Discontinued Description)
SOO□- CTUNR○○-○○A	<b>F81</b>	Boring Bars
SOO□- CTUP%L○○-○○	<b>F61,P24</b>	Boring Bars
SOO(○)□- KTGF16	<b>G15</b>	Sleeve Holder (Grooving)
SOO(○)□- KTTX16	<b>J20</b>	Sleeve Holder (Threading)
SOO□- PCLN%L○○-○○	<b>F68</b>	Boring Bars

# Description Index

○ : Figure, □ : Alphabet

Description	Page	Category
S○○□- PDQN%○○○○	F71	Boring Bars
S○○□- PDUN%○○○○	F69,F71	Boring Bars
S○○□- PDZN%○○○○	F71	Boring Bars
S○○□- PTUN%○○○○	F75	Boring Bars
S○○□- PWLN%○○○○	F76,F78	Boring Bars
S○○(○)□ SCLCLO○	E34	Sleeve Holder (Turning)
S○○□- SCLC%○○○○	F89,P23	Boring Bars (Discontinued Description)
S○○□- SCLC%○○○○A	F39	Boring Bars (Dynamic Bar)
S○○□- SCLC%○○○○E	F88,P23	Boring Bars (Discontinued Description)
S○○□- SCLC%○○○○AE	F39	Boring Bars (Dynamic Bar)
S○○○□- SCLCRO○○○○EZ	F19	Boring Bars (EZ Bar PLUS)
S○○□- SCLP%○○○○	F89,P23	Boring Bars (Discontinued Description)
S○○□- SCLP%○○○○A	F41	Boring Bars (Dynamic Bar)
S○○□- SCLP%○○○○E	F88,P23	Boring Bars (Discontinued Description)
S○○□- SDLCL○○	E35	Sleeve Holder (Turning)
S○○□- SDQC%○○○○A	F44	Boring Bars (Dynamic Bar)
S○○□- SDUCL○○	E35	Sleeve Holder (Turning)
S○○□- SDUC%○○○○	F89,P23	Boring Bars (Discontinued Description)
S○○□- SDUC%○○○○A	F43	Boring Bars (Dynamic Bar)
S○○□- SDUC%○○○○E	F88,P23	Boring Bars (Discontinued Description)
S○○□- SDZC%○○○○	F89,P23	Boring Bars (Discontinued Description)
S○○□- SDZC%○○○○A	F45	Boring Bars (Dynamic Bar)
S○○□- SDZC%○○○○E	F88,P23	Boring Bars (Discontinued Description)
S○○□- SSKPR○○○○	F60,P24	Boring Bars
S○○□- STLB%○○○○A	F49	Boring Bars (Dynamic Bar)
S○○□- STLB%○○○○AE	F49	Boring Bars (Dynamic Bar)
S○○□- STLC%○○○○A	F47	Boring Bars (Dynamic Bar)
S○○□- STLP%○○○○A	F49	Boring Bars (Dynamic Bar)
S○○□- STUB%○○○○	F90,P23	Boring Bars (Discontinued Description)
S○○□- STUB%○○○○E	F88,P23	Boring Bars (Discontinued Description)
S○○□- STUP%○○○○	F90,P23	Boring Bars (Discontinued Description)
S○○□- STUP%○○○○E	F88,P23	Boring Bars (Discontinued Description)
S○○□- STWPR○○○○	F50,J31	Toolholder (Boring / Threading)
S○○□- STWP%○○○○E	F50,J31	Toolholder (Boring / Threading)
S○○(○)□ STW%15	F34,G72	Toolholder (for Twin Bars)
S○○□- SVJB%○○○○A	F52	Boring Bars (Dynamic Bar)
S○○□- SVJB%○○○○E	F87,F88,P24	Boring Bars (Discontinued Description)
S○○□- SVJB%○○○○EN	F88,P24	Boring Bars (Discontinued Description)
S○○□- SVJC%○○○○A	F52	Boring Bars (Dynamic Bar)
S○○□- SVJC%○○○○E	F89,P24	Boring Bars (Discontinued Description)
S○○□- SVJP%○○○○A	F52	Boring Bars (Dynamic Bar)
S○○□- SVJP%○○○○E	F89,P24	Boring Bars (Discontinued Description)
S○○□- SVNR12	P22	Toolholder (for System Tip-Bars / Discontinued Description)
S○○□- SVNR12N	F31	Toolholder (for System Tip-Bars)
S○○(○)□ SVNR12S	P22	Toolholder (for System Tip-Bars / Discontinued Description)
S○○(○)□ SVNR12SN	F31	Toolholder (for System Tip-Bars)
S○○(○)□ SVNR12SXN	F33	Toolholder (for System Tip-Bars)
S○○□- SVNR12XN	F33,P22	Toolholder (for System Tip-Bars)
S○○□- SVPB%○○○○A	F54	Boring Bars (Dynamic Bar)
S○○□- SVPB%○○○○E	F87,F89,P24	Boring Bars (Discontinued Description)
S○○□- SVPB%○○○○EN	F89,P24	Boring Bars (Discontinued Description)
S○○□- SVPC%○○○○A	F54	Boring Bars (Dynamic Bar)
S○○□- SVPC%○○○○E	F89,P24	Boring Bars (Discontinued Description)
S○○(○)□ SVUBLO○	E36	Sleeve Holder (Turning)
S○○□- SVUCL○○	E36	Sleeve Holder (Turning)
S○○□- SVUB%○○○○A	F57	Boring Bars (Dynamic Bar)
S○○□- SVUB%○○○○E	F87,F89,P24	Boring Bars (Discontinued Description)
S○○□- SVUB%○○○○EN	F89,P24	Boring Bars (Discontinued Description)
S○○□- SVUC%○○○○A	F57	Boring Bars (Dynamic Bar)
S○○□- SVUC%○○○○E	F89,P24	Boring Bars (Discontinued Description)
S○○□- SVZB%○○○○A	F57	Boring Bars (Dynamic Bar)
S○○□- SVZB%○○○○E	F87,F89,P24	Boring Bars (Discontinued Description)
S○○□- SVZB%○○○○EN	F89,P24	Boring Bars (Discontinued Description)
S○○□- SVZC%○○○○A	F57	Boring Bars (Dynamic Bar)
S○○□- SVZC%○○○○E	F89,P24	Boring Bars (Discontinued Description)
S○○□- SWUB%○○○○	F90,P24	Boring Bars (Discontinued Description)
S○○□- SWUB%○○○○A	F59	Boring Bars (Dynamic Bar)
S○○□- SWUB%○○○○AE	F59	Boring Bars (Dynamic Bar)
S○○□- SWUB%○○○○E	F89,P24	Boring Bars (Discontinued Description)
S○○□- SWUB%○○○○○○	F90,P24	Boring Bars (Discontinued Description)
S○○□- SWUP%○○○○A	F59	Boring Bars (Dynamic Bar)
S○○□- SWUP%○○○○E	F89,P24	Boring Bars (Discontinued Description)
S○○□- SYXP%○○○○E	P24	Boring Bars (Discontinued Description)
S○○□- WWLN%○○○○E	F78	Boring Bars
SFO○- DRA○○○M-○	K12,K13,K14	Toolholder ("MagicDrill")
SFO○- DRC○○○M-○	K26,K27,K28	Toolholder ("MagicDrill")

Description	Page	Category
SS○○- DRA○○○M-○	K9,K10,K11	Toolholder ("MagicDrill")
SS○○- DRC○○○M-○	K21,K22,K23	Toolholder ("MagicDrill")
SABSR ○○○○□(□)-○○F	E17,E47,P20	Toolholder (Turning)
SABWR ○○○○□(□)-○○F	E18,E19,E47,P20	Toolholder (Turning)
SB-1STR	F51,P5	Spare Parts (Screw)
SB-1TR	F49,F51,P5	Spare Parts (Screw)
SB-2TR	F51,J17,P5	Spare Parts (Screw)
SB-3STR	F50,J31,P5	Spare Parts (Screw)
SB-3TR	F50,J31,N16,P5	Spare Parts (Screw)
SB-3.5TR	J16,J17,P5	Spare Parts (Screw)
SB-4TR	F50,F60,F62,G16, G57,J22,J23,N16,P5	Spare Parts (Screw)
SB-5TR	G34,G35,G36,G59, G60,H22,H23,P5	Spare Parts (Screw)
SB-1635TR	F19,F39,F46,P5	Spare Parts (Screw)
SB-1840TRP	M130,P5	Spare Parts (Screw)
SB-2035TR	F19,F39,F49,F59,P5	Spare Parts (Screw)
SB-2035TRG	M72,P5	Spare Parts (Screw)
SB-2040TR	J17,P5	Spare Parts (Screw)
SB-2040TRG	M134,M138,P5	Spare Parts (Screw)
SB-2042TRG	K40,K42,K44,K46, M72,M73,P5	Spare Parts (Screw)
SB-2045TR	K40,K42,K44,K46, K56,K58,K60,P5	Spare Parts (Screw)
SB-2045TRN	G49,G50,P5	Spare Parts (Screw)
SB-2050TR	E29,E32,E33,E36,F52,F54, F57,F59,F72,F87,J17,P5	Spare Parts (Screw)
SB-2060TR	P5	Spare Parts (Screw)
SB-2080TR	K54,P5	Spare Parts (Screw)
SB-2250TR	F47,K40,K42,K44, K46,M188,P5	Spare Parts (Screw)
SB-2255TR	G49,G50,G51,P5	Spare Parts (Screw)
SB-2260TR	K56,K58,K60, M188,P5	Spare Parts (Screw)
SB-2290TR	K54,P5	Spare Parts (Screw)
SB-2545TR	F39,F45,F49,F59, M62,M63,M109,P5	Spare Parts (Screw)
SB-2555TRG	M62,M63,M64,M65,M80, M81,M83,M134,M138,P5	Spare Parts (Screw)
SB-2555TRP	M177,P5	Spare Parts (Screw)
SB-2560TR	E34,E35,F43,F44, F45,F47,M190,P5	Spare Parts (Screw)
SB-2570TR	E21,E23,E25,E26,E27,E28, E29,E30,E31,E32,E33,E34, E36,E39,F52,F54,F57,G49, G50,G51,K40,K42,K44,K46, K56,K58,K60,P5	Spare Parts (Screw)
SB-3060TR	F41,F49,M45,M109, M180,M186,M190,P5	Spare Parts (Screw)
SB-3060TRG	P5	Spare Parts (Screw)
SB-3065TRP	M55,M56,M77, M78,M125,P5	Spare Parts (Screw)
SB-3070TRG	M134,M138,P5	Spare Parts (Screw)
SB-3070TRP	M175,M177,P5	Spare Parts (Screw)
SB-3080TR	D14,E17,E18,E19,E29,E38,F30, F31,F33,F34,F35,F74,G49,G72, G73,K40,K42,K44,K46,M97, M180,M181,M188,N16,P5	Spare Parts (Screw)
SB-3580TR	F65,P5	Spare Parts (Screw)
SB-3590TRP	M158,M159,P5	Spare Parts (Screw)
SB-3592TR	K69,P5	Spare Parts (Screw)
SB-4050TRN	H10,P5	Spare Parts (Screw)
SB-4060TR	M110,M111,P5	Spare Parts (Screw)
SB-4065TR	E34,F39,F41,F43, F44,F45,F49,F59, M110,M111,M192,P5	Spare Parts (Screw)
SB-4070TRG	M134,M138,P5	Spare Parts (Screw)
SB-4070TRN	M63,M64,M65,M80, M81,M83,P5	Spare Parts (Screw)
SB-4070TRS	G14,G15,J22,P5	Spare Parts (Screw)
SB-4070TRW	G13,G14,J20,P6	Spare Parts (Screw)
SB-4075TRP	M119,M120,P5	Spare Parts (Screw)
SB-4082TPR	M34,P5	Spare Parts (Screw)

T

?

Index

Description	Page	Category
SB-4085TR	D8,D10,D12,D16,D20,E20,E23,E25,E28,E27,E28,E35,F67,F70,F73,F74,F77,G49,J17,K41,K42,K44,K46,K56,K58,K60,K62,M180,M181,M190,M192,P5	Spare Parts (Screw)
SB-4085TRP	M170,M171,P5	Spare Parts (Screw)
SB-4090TRP	M55,M56,M77,M78,P5	Spare Parts (Screw)
SB-4090TRPN	M117,M175,M177,P5	Spare Parts (Screw)
SB-4590TRWN	E12,H8,J18,P6	Spare Parts (Screw)
SB-5070TR	M186,P5	Spare Parts (Screw)
SB-5085TR	K57,K58,K59,K60,K61,K62,K63,M97,M112,P5	Spare Parts (Screw)
SB-5090TR	E23,F62,K41,K43,K45,K46,M186,P5	Spare Parts (Screw)
SB-25100TR	K54,P5	Spare Parts (Screw)
SB-40115TR	F87,M180,M181,P5	Spare Parts (Screw)
SB-40120TR	G21,H14,H15,P5	Spare Parts (Screw)
SB-40125TRN	E30,E31,F52,F54,F57,N8,P5	Spare Parts (Screw)
SB-40140TR	G63,M49,M101,M104,M105,P5	Spare Parts (Screw)
SB-40140TRN	M27,M91,P5	Spare Parts (Screw)
SB-45130TR	M96,P5	Spare Parts (Screw)
SB-50120TR	M180,M181,P5	Spare Parts (Screw)
SB-50120TRP	M117,M119,M175,M177,P5	Spare Parts (Screw)
SB-50120TRS	M34,P5	Spare Parts (Screw)
SB-50140TR	M27,M91,P5	Spare Parts (Screw)
SB-50140TRP	M170,M171,P5	Spare Parts (Screw)
SB-60120TR	G23,G24,G25,G76,G80,G81,H17,K41,K43,K45,K46,K57,K59,K63,M49,M101,M104,M105,M181,P5	Spare Parts (Screw)
SC-30067	M166,P6	Spare Parts (Screw)
SC-35085	M166,P6	Spare Parts (Screw)
SC-40100	M166,P6	Spare Parts (Screw)
SC-50130	M166,P6	Spare Parts (Screw)
SC-60160	M166,P6	Spare Parts (Screw)
SC-60210	M166,P6	Spare Parts (Screw)
SCAC% □□□□□-□□	E47,P21	Toolholder (Turning/Discontinued Description)
SCACR □□□□□-□□FF	E47,P21	Toolholder (Turning/Discontinued Description)
SCLC% □□□□□-□□	E23,E47,P21	Toolholder (Turning)
SCLC% □□□□□(□)-□□FF	E23	Toolholder (Turning)
SCLNR □□□□□-□□FF	E38	Toolholder (for Small Double-Sided Tools)
SCMT □□□□□□□-HQ	B69	Insert (Turning)
SDCN □□□□□AUTN	M10	Insert (Milling)
SDCT □□□□□□□□□□	M161	Insert (Milling)
SDCT □□□□□□%□-□□	M161	Insert (Milling)
SDET □□□□□□□□□□	M161	Insert (Milling)
SDET □□□□□□%□-□□	M161	Insert (Milling)
SDJC% □□□□□□□□	E25	Toolholder (Turning)
SDJC% □□□□□□□□	E47,P21	Toolholder (Turning/Discontinued Description)
SDJCR □□□□□□□□□□-□□□	E20	Toolholder (Goose-neck holder)
SDJC% □□□□□□(□)-□□FF	E25	Toolholder (Turning)
SDLC% □□□□□□□□□□	P21	Toolholder (Turning/Discontinued Description)
SDLNR □□□□□□□□□□	E38	Toolholder (for Small Double-Sided Tools)
SDKN □□□□□□□□□□	C35,M10,M25	Insert (Milling)
SDKN □□□□□□□□□□-NE	C35,M25	Insert (Milling)
SDKN □□□□□□□□□□	M10	Insert (Milling)
SDKR □□□□□□□□□□-S	M10	Insert (Milling)
SDKW □□□□□□□□□□	M22	Insert (Milling)
SDKW □□□□□□□□□□	M22	Insert (Milling)
SDKW □□□□□□□□□□	M22	Insert (Milling)
SDLC% □□□□□□(□)-□□FF	E26,E47	Toolholder (Turning)
SDLP% □□□□□□□□□□	E47,P21	Toolholder (Turning/Discontinued Description)
SDLP% □□□□□□(□)-□□FF	E28	Toolholder (Turning)
SDMR □□□□□□□□□□-H	M10	Insert (Milling)
SDMT □□□□□□□□□□-C	M22	Insert (Milling)
SDMT □□□□□□□□□□-H	M22	Insert (Milling)
SDMT □□□□□□□□□□-E-K	M22	Insert (Milling)
SDNCN □□□□□□□□□□	E27,E47,P21	Toolholder (Turning)
SDNC% □□□□□□□□□□	E27,E47,P21	Toolholder (Turning)
SDXC% □□□□□□□□□□	E26,E47,P21	Toolholder (Turning)
SE-3070TRP	M158,M159,P6	Spare Parts (Screw)
SE-40050TRN	M147,M148,M149,P6	Spare Parts (Screw)
SE-40055TR	M147,M148,M149,P6	Spare Parts (Screw)

Description	Page	Category
SE-40068TR	M147,M148,M149,P6	Spare Parts (Screw)
SE-40080TR	M148,M149,P6	Spare Parts (Screw)
SE-40090TR	M147,M148,M149,P6	Spare Parts (Screw)
SE-40100TR	M148,M149,P6	Spare Parts (Screw)
SE-40120TR	G34,H22,P6	Spare Parts (Screw)
SE-50125TR	G21,G22,G34,H14,H16,H22,P6	Spare Parts (Screw)
SEEN □□□□□□□□-AFFN	C35,M25	Insert (Milling)
SEEN □□□□□□□□-AFFN-NE	C35,M25	Insert (Milling)
SEEN □□□□□□□□-AFFR-W	C35,M10,M25	Insert (Milling)
SEEN □□□□□□□□-AFTN	M10	Insert (Milling)
SEEN □□□□□□□□-AFTR-W	M10	Insert (Milling)
SEGN □□□□□□□□-ONE	C29	Insert (Milling)
SEKN □□□□□□□□-AFFN	M10	Insert (Milling)
SEKN □□□□□□□□-AFTN	M10	Insert (Milling)
SEKN □□□□□□□□-EFTR	M10	Insert (Milling)
SEKR □□□□□□□□-AFEN-S	M10	Insert (Milling)
SEKT □□□□□□□□-AFEN-S	M22	Insert (Milling)
SEKW □□□□□□□□-AFTN	M22	Insert (Milling)
SEKW □□□□□□□□-FN	M22	Insert (Milling)
SEKW □□□□□□□□-TN	M22	Insert (Milling)
SEMM □□□□□□□□-PESR	M22	Insert (Milling)
SEMR □□□□□□□□-AFER-H	M10	Insert (Milling)
SEMT □□□□□□□□-C	M22	Insert (Milling)
SF%□- □□□□(□)□	G92,G93,G94	Blade (Face Grooving)
SH □□□□□□□□□□	F85	Sleeve (for Boring Bar)
SH-50150TR	M36,P6	Spare Parts (Cartridge Clump Screw)
SHA □□□□□□□□□□	F84,G51	Sleeve (for Automatic Lathe SIGE)
SHA □□□□□□□□□□	F84,G51	Sleeve (for Automatic Lathe SIGE)
SHC □□□□□□□□□□	F85	Coolant Sleeve (for Boring Bar)
SHE □□□□□□□□□□	K49	Adjustment Sleeve (for MagicDrill)
SHEM □□□□□□□□□□	K55	Adjustment Sleeve (for MagicDrill DRS)
SHL- □	F85	Spare Parts (Back Cover)
SIGE%□ □□□□□□□□-EH	G49	Toolholder (Internal Grooving)
SIGE%□ □□□□□□□□-WH	G50	Toolholder (Internal Grooving)
SIGER □□□□□□□□□□-WH-90	G51	Toolholder (Internal Grooving / for Automatic Lathe)
SIN%□ □□□□□□□□-□□	J17	Toolholder (Threading)
SIN%□ □□□□□□□□-□□E	J17	Toolholder (Threading)
SJS- □	F86	Coolant Joint
SLT □□□□□□□□□□	M144	Insert (Slot Mill MSTA)
SM□□□□□□□□-A	N14,N15,N16	Spare Parts (Plate)
SM□□□□□□□□□□-B	N14	Spare Parts (Plate)
SNCN □□□□□□□□□□-XNTN	M11	Insert (Milling)
SNGA □□□□□□□□□□	B31	Insert (Turning)
SNGA □□□□□□□□□□-MEF	C10	Insert (Turning)
SNGA □□□□□□□□□□□□□□	B101	Insert (Turning)
SNGA □□□□□□□□□□□□□□-ME	C10	Insert (Turning)
SNGA □□□□□□□□□□□□□□-MEH	C10	Insert (Turning)
SNGA □□□□□□□□□□□□□□-MEP	C10	Insert (Turning)
SNGA □□□□□□□□□□□□□□-MET	C10	Insert (Turning)
SNGA □□□□□□□□□□□□□□-T□□□□□	B101	Insert (Turning)
SNGA □□□□□□□□□□□□□□-T□□□□□□□□-ME	C10	Insert (Turning)
SNGG □□□□□□□□□□-25R	B32	Insert (Turning)
SNGG □□□□□□□□□□-B/C	B32	Insert (Turning)
SNGN □□□□□□□□□□□□□□	B101	Insert (Turning)
SNGN □□□□□□□□□□□□□□-T□□□□□□□□	B101,B102	Insert (Turning / Milling)
SNGX □□□□□□□□□□□□□□-T□□□□□□□□	B102	Insert (Turning)
SNKN □□□□□□□□□□-XNTN	M11	Insert (Milling)
SNMA □□□□□□□□□□	B31	Insert (Turning)
SNMA □□□□□□□□□□□□□□	B101	Insert (Turning)
SNMF □□□□□□□□□□-XNTN	M11	Insert (Milling)
SNMF □□□□□□□□□□□□□□-21	B95,F62	Insert (Turning)
SNMG □□□□□□□□□□	B29	Insert (Turning)
SNMG □□□□□□□□□□□□□□	B31	Insert (Turning)
SNMG □□□□□□□□□□□□□□-GC	B31	Insert (Turning)
SNMG □□□□□□□□□□□□□□-HQ	B29	Insert (Turning)
SNMG □□□□□□□□□□□□□□-HS	B29	Insert (Turning)
SNMG □□□□□□□□□□□□□□-MQ	B31	Insert (Turning)
SNMG □□□□□□□□□□□□□□-MS	B31	Insert (Turning)
SNMG □□□□□□□□□□□□□□-MU	B31	Insert (Turning)
SNMG □□□□□□□□□□□□□□-PG	B29	Insert (Turning)
SNMG □□□□□□□□□□□□□□-PH	B30	Insert (Turning)
SNMG □□□□□□□□□□□□□□-PQ	B29	Insert (Turning)
SNMG □□□□□□□□□□□□□□-PS	B29	Insert (Turning)
SNMG □□□□□□□□□□□□□□-PT	B29	Insert (Turning)
SNMG □□□□□□□□□□□□□□-%□-C	B32	Insert (Turning)

# Description Index

○ : Figure, □ : Alphabet

Description	Page	Category
SNMG ○○○○○XP	<b>B30</b>	Insert (Turning)
SNMG ○○○○○XQ	<b>B30</b>	Insert (Turning)
SNMG ○○○○○XS	<b>B30</b>	Insert (Turning)
SNMG ○○○○○ZS	<b>B31</b>	Insert (Turning)
SNMM ○○○○○PX	<b>B30</b>	Insert (Turning)
SNMN ○○○○○○	<b>B31,M11</b>	Insert (Turning / Milling)
SNMN ○○○○○○S○○○○○	<b>C19</b>	Insert (Turning)
SNMN ○○○○○○T○○○○○	<b>B102</b>	Insert (Turning)
SOKN 13T3AXFN	<b>M10</b>	Insert (Milling)
SOKN ○○○○AXFN-NE	<b>C35,M25</b>	Insert (Milling)
SOKN 13T3AXTN	<b>M10</b>	Insert (Milling)
SOKR 13T3AXEN-J	<b>M10</b>	Insert (Milling)
SOMT ○○○○AXEN-J	<b>M22</b>	Insert (Milling)
SOMT ○○○○○ER-FL	<b>M17</b>	Insert (Milling)
SOMT ○○○○○ER-GM	<b>M17</b>	Insert (Milling)
SOMT ○○○○○ER-LD	<b>M17</b>	Insert (Milling)
SOMW ○○○○AXFN	<b>M22</b>	Insert (Milling)
SOMW ○○○○AXTN	<b>M22</b>	Insert (Milling)
SP-2D	<b>D14,P18</b>	Spare Parts (Spring)
SP-3D	<b>D8,D10,D12,D20,F67,F70,F73,F74,F77,P18</b>	Spare Parts (Spring)
SP-5	<b>G63,P18</b>	Spare Parts (Spring)
SP-5D	<b>D16,P18</b>	Spare Parts (Spring)
SP-6	<b>G11,G38,G39,G61,P18</b>	Spare Parts (Spring)
SP-8	<b>P18</b>	Spare Parts (Spring)
SP3X4	<b>F30,F31,F33,P6</b>	Spare Parts (Screw)
SP3X6	<b>M44,P6</b>	Spare Parts (Screw)
SP3X8	<b>D38,E42,E43,J16,J17,M39,M43,M51,M95,N9,P6</b>	Spare Parts (Screw)
SP3X10	<b>F60,F61,P6</b>	Spare Parts (Screw)
SP4X9	<b>M38,P6</b>	Spare Parts (Screw)
SP8X35	<b>M38,P6</b>	Spare Parts (Mounting Bolt)
SP-129	<b>D34,D35,P10</b>	Spare Parts (Shim)
SP-130A	<b>P11</b>	Spare Parts (Shim)
SP-141	<b>D25,D30,D31,D34,D35,P10</b>	Spare Parts (Shim)
SP-141P	<b>F79,F80,P11</b>	Spare Parts (Shim)
SP-143	<b>D25,D34,D35,P10</b>	Spare Parts (Shim)
SP-143P	<b>F79,P11</b>	Spare Parts (Shim)
SP-148	<b>D34,D35,P10</b>	Spare Parts (Shim)
SP-162	<b>D25,D30,D31,P10</b>	Spare Parts (Shim)
SP-210A	<b>F81,P11</b>	Spare Parts (Shim)
SP-219	<b>D36,P10</b>	Spare Parts (Shim)
SP-221	<b>D26,P10</b>	Spare Parts (Shim)
SP-223	<b>D26,P10</b>	Spare Parts (Shim)
SP-230P	<b>P11</b>	Spare Parts (Shim)
SP-341P	<b>F79,P11</b>	Spare Parts (Shim)
SP-342	<b>D23,P10</b>	Spare Parts (Shim)
SP-420A	<b>F81,P11</b>	Spare Parts (Shim)
SP-429	<b>D32,P11</b>	Spare Parts (Shim)
SP-441	<b>D22,D28,P10</b>	Spare Parts (Shim)
SP-441P	<b>F80,P11</b>	Spare Parts (Shim)
SP-443	<b>D22,P10</b>	Spare Parts (Shim)
SP-443P	<b>P11</b>	Spare Parts (Shim)
SP-454	<b>D22,P10</b>	Spare Parts (Shim)
SP-521	<b>D29,P11</b>	Spare Parts (Shim)
SP-521P	<b>F80,P11</b>	Spare Parts (Shim)
SP-523	<b>P11</b>	Spare Parts (Shim)
SP-523P	<b>P11</b>	Spare Parts (Shim)
SP-541	<b>D29,P11</b>	Spare Parts (Shim)
SP-543	<b>P11</b>	Spare Parts (Shim)
SP-826	<b>D33,P11</b>	Spare Parts (Shim)
SP-829	<b>D33,P11</b>	Spare Parts (Shim)
SP-841	<b>D27,D33,P11</b>	Spare Parts (Shim)
SP-843	<b>D27,D33,P11</b>	Spare Parts (Shim)
SP-849	<b>D33,P11</b>	Spare Parts (Shim)
SP-861	<b>D27,P11</b>	Spare Parts (Shim)
SPCN ○○○○EDTR	<b>M11</b>	Insert (Milling)
SPCN ○○○○EETR1	<b>M11</b>	Insert (Milling)
SPCN ○○○○XPTR	<b>M11</b>	Insert (Milling)
SPCT ○○T○○○□□□□	<b>M160</b>	Insert (Milling)
SPCT ○○T○○○○%□□□	<b>M160</b>	Insert (Milling)
SPEN ○○○○EER	<b>M11</b>	Insert (Milling)
SPEN ○○○○EESR	<b>M11</b>	Insert (Milling)
SPET ○○T○○○○%□□□	<b>M160</b>	Insert (Milling)
SPGH ○○○○○L	<b>B69</b>	Insert (Turning)
SPGN ○○○○○○	<b>B69,C29,M11</b>	Insert (Turning / Milling)

Description	Page	Category
SPGN ○○○○○○NE	<b>C29</b>	Insert (Turning / Milling)
SPGN ○○○○○○S○○○○○	<b>B105</b>	Insert (Turning)
SPGN ○○○○○○T○○○○○	<b>B105</b>	Insert (Turning)
SPGR ○○○○○%L	<b>B69</b>	Insert (Turning)
SPKN ○○○○EDER	<b>M11</b>	Insert (Milling)
SPKN ○○○○EDFR	<b>M11</b>	Insert (Milling)
SPKN ○○○○EDT%L	<b>M11</b>	Insert (Milling)
SPKN ○○○○XETR	<b>M11</b>	Insert (Milling)
SPKN ○○○○XPFR	<b>M11</b>	Insert (Milling)
SPKN ○○○○XPT%L	<b>M11</b>	Insert (Milling)
SPKR ○○○○EDER-S	<b>M11</b>	Insert (Milling)
SPMN ○○○○○○	<b>B69,M11</b>	Insert (Turning / Milling)
SPMR ○○○○EDER-H	<b>M11</b>	Insert (Milling)
SPMR ○○○○○○	<b>B69</b>	Insert (Turning)
SPMR ○○○○○G	<b>B69</b>	Insert (Turning)
SPMT ○○○○EDER-NB○	<b>M23</b>	Insert (Milling)
SPMT ○○○○EDER-NB○P	<b>M23</b>	Insert (Milling)
SPMT ○○○○□□□□-NB○□	<b>M23</b>	Insert (Milling)
SPMT ○○○○□□□□-V	<b>M23</b>	Insert (Milling)
SPMT ○○○○○EN-NB○	<b>M24</b>	Insert (Milling)
SPMT ○○○○○EN-NB○P	<b>M24</b>	Insert (Milling)
SPMT ○○○○○EN-V	<b>M24</b>	Insert (Milling)
SPMT ○○○○○E-Z	<b>M24</b>	Insert (Milling)
SP-RC	<b>D38,P12</b>	Spare Parts (Shim)
SPW-6045	<b>M96,P6</b>	Spare Parts (Screw)
SPW-7050	<b>M27,M91,P6</b>	Spare Parts (Screw)
SRCP%L ○○○○B-○○-A○○	<b>F62</b>	Boring Bars (for Bearing Machining)
SS-4N	<b>E30,E31,F52,F55,F57,N8,P6</b>	Spare Parts (Shim Screw)
STDER ○○○CA○○	<b>N16</b>	Toolholder (Cartridge)
STDPR ○○○CA○○	<b>N16</b>	Toolholder (Cartridge)
STEER ○○○CA○○	<b>N16</b>	Toolholder (Cartridge)
STEPR ○○○CA○○	<b>N16</b>	Toolholder (Cartridge)
STFER ○○○CA○○	<b>N16</b>	Toolholder (Cartridge)
STFPR ○○○CA○○	<b>N16</b>	Toolholder (Cartridge)
STGC%L ○○○□-○○	<b>E29</b>	Toolholder (Turning)
STGP%L ○○○□-○○	<b>E29,P21</b>	Toolholder (Turning)
STLNR ○○○□-○○FF	<b>E39</b>	Toolholder (for Small Double-Sided Tools)
STW%L ○○○□-15	<b>F34,G72,P22</b>	Toolholder (for Twin Bars)
STWSR ○○○□(□)-15T	<b>F35,G73,P22</b>	Toolholder (for Twin Bars)
SV-60136R	<b>M94,P6</b>	Spare Parts (Screw)
SV-60136TR	<b>M40,P6</b>	Spare Parts (Screw)
SVJB%L ○○○□-○○	<b>E30</b>	Toolholder (Turning)
SVJB%L ○○○□-○○F	<b>E48,P21</b>	Toolholder (Turning/Discontinued Description)
SVJB%L ○○○□-○○N	<b>E30</b>	Toolholder (Turning)
SVJB%L ○○○□-○○FF	<b>E30</b>	Toolholder (Turning)
SVJP%L ○○○□(□)-○○FF	<b>E32</b>	Toolholder (Turning)
SVLP%L ○○○□-○○F	<b>E48,P21</b>	Toolholder (Turning/Discontinued Description)
SVLP%L ○○○□-○○FF	<b>E48,P21</b>	Toolholder (Turning/Discontinued Description)
SVLPR ○○○□(□)-○○F○○	<b>E21</b>	Toolholder (Goose-neck holder)
SVLP%L ○○○□(□)-○○FF	<b>E32,E48</b>	Toolholder (Turning)
SVNR ○○○□-12	<b>P22</b>	Toolholder (for System Tip-Bars / Discontinued Description)
SVNR ○○○□-12N	<b>F30</b>	Toolholder (for System Tip-Bars)
SVN-32	<b>F87,P12</b>	Spare Parts (Shim)
SVN-32N	<b>E30,E31,F52,F55,F57,N8,P12</b>	Spare Parts (Shim)
SVN-32S	<b>E30,E31,F52,F55,F57,P12</b>	Spare Parts (Shim)
SVNSR ○○○□-12-○○	<b>P22</b>	Toolholder (for System Tip-Bars / Discontinued Description)
SVNSR ○○○□-12-○○N	<b>F30</b>	Toolholder (for System Tip-Bars)
SVNSR ○○○□-12-○○XN	<b>F33</b>	Toolholder (for System Tip-Bars)
SVPB%L ○○○□(□)-○○	<b>E31,E48,P22</b>	Toolholder (Turning)
SVPB%L ○○○□-○○N	<b>E31,P22</b>	Toolholder (Turning)
SVPP%L ○○○□-○○	<b>E48,P21</b>	Toolholder (Turning/Discontinued Description)
SVPP%L ○○○□(□)-○○FF	<b>E33,P21</b>	Toolholder (Turning)
SVVBN ○○○□(□)-○○	<b>E31,E48,P22</b>	Toolholder (Turning)
SVVBN ○○○□-○○N	<b>E31,P22</b>	Toolholder (Turning)
SW-1.8	<b>N14,N15,N16</b>	Spare Parts (Axial screw driver)
SYXP%L ○○○□-○○F	<b>P21</b>	Toolholder (Turning/Discontinued Description)
<b>T</b>		
T63H- BL○○○-○○○	<b>P28</b>	Toolholder (HSK Tooling / Discontinued Description)
T63H- C○○-○○(○)	<b>N10</b>	Toolholder (HSK Tooling)
T63H- KGBA%L-16	<b>N9</b>	Grooving (HSK Tooling)
T63H- KGBA%L-22-○○	<b>N9</b>	Grooving (HSK Tooling)
T63H- KTNR-○○	<b>N9</b>	Threading (HSK Tooling)
T63H- N○○-○○(○)	<b>N10</b>	Toolholder (HSK Tooling)
T63H- PCLN%L-DX12	<b>N5</b>	Toolholder (HSK Tooling)

T

?

Index

Description	Page	Category
T63H- PCMNN-□12	N5	Toolholder (HSK Tooling)
T63H- PDJN%-DX15	N5	Toolholder (HSK Tooling)
T63H- PDNNN-□15	N6	Toolholder (HSK Tooling)
T63H- PTGN%-DX16	N6	Toolholder (HSK Tooling)
T63H- PWLN%-DX08	N7	Toolholder (HSK Tooling)
T63H- S2020R-105T	N4	Toolholder (HSK Tooling)
T63H- S2525-○○(○)F	N4	Toolholder (HSK Tooling)
T63H- S2525%-○○○	N3	Toolholder (HSK Tooling)
T63H- SVLB%-DX16N	N8	Toolholder (HSK Tooling)
T63H- SVVBN-□16N	N8	Toolholder (HSK Tooling)
T63H- WTENN-□16	N6	Toolholder (HSK Tooling)
T63H- WWMNN-□08	N7	Toolholder (HSK Tooling)
T100H- C○○-○○(○)	N10	Toolholder (HSK Tooling)
T100H- N○○-○○(○)	N10	Toolholder (HSK Tooling)
T100H- S2525-○○○F	N4	Toolholder (HSK Tooling)
T100H- S2525R-○○○T	N4	Toolholder (HSK Tooling)
T100H- S2525%-○○○	N3	Toolholder (HSK Tooling)
TBET ○○○○○○(○)M%L	B70	Insert (Turning)
TBGN ○○○○○○F	C18	Insert (Turning)
TBGN ○○○○○○S○○○○○	B105	Insert (Turning)
TBGN ○○○○○○T○○○○○	C18	Insert (Turning)
TBGT ○○○○○○CF	B70	Insert (Turning)
TBGT ○○○○○○(○)M	B70	Insert (Turning)
TBGT ○○○○○○M-CF	B70	Insert (Turning)
TBGT ○○○○○○MP-CF	B70	Insert (Turning)
TBGT ○○○○○○(○)%L	B70	Insert (Turning)
TBGW ○○○○○○	B70,C26	Insert (Turning)
TBGW ○○○○○○NE	C26	Insert (Turning)
TBMT ○○○○○○	C26	Insert (Turning)
TBMT ○○○○○○DP	B70	Insert (Turning)
TBMT ○○○○○○NE	C26	Insert (Turning)
TCET ○○○○○○(○)F%-USF	B71	Insert (Turning)
TCET ○○○○○○(○)MF%-USF	B71	Insert (Turning)
TCGN ○○○○○○	B73	Insert (Turning)
TCGN ○○○○○○T○○○○○	B105	Insert (Turning)
TCGR ○○○○○○L-F	B73	Insert (Turning)
TCGT ○○○○○○E%-U	B72	Insert (Turning)
TCGT ○○○○○○(○)F%-U	B72	Insert (Turning)
TCGT ○○○○○○ME%-U	B72	Insert (Turning)
TCGT ○○○○○○(○)MF%-U	B72	Insert (Turning)
TCGT ○○○○○○%-A3	B73	Insert (Turning)
TCGW ○○○○○○	B73,C26	Insert (Turning)
TCGW ○○○○○○NE	C26	Insert (Turning)
TCGW ○○○○○○SE	C26	Insert (Turning)
TCMT ○○○○○○	C26	Insert (Turning)
TCMT ○○○○○○HQ	B71	Insert (Turning)
TCMT ○○○○○○NE	C26	Insert (Turning)
TCMT ○○○○○○SE	C26	Insert (Turning)
TCMX ○○○○○○WP	B71	Insert (Turning)
TEEN ○○○○PTFR	C35,M25	Insert (Milling)
TEEN ○○○○PTFR-NE	C35,M25	Insert (Milling)
TEEN ○○○○PTTR	M12	Insert (Milling)
TEKN ○○○○PTFR	C35,M12,M25	Insert (Milling)
TEKN ○○○○PTFR-NE	C35,M25	Insert (Milling)
TEKN ○○○○PTTR	M12	Insert (Milling)
TEKR ○○○○PTFR-S	M12	Insert (Milling)
TEMR ○○○○PTFR-H	M12	Insert (Milling)
TEMT ○○○○○○AQ	M24	Insert (Milling)
TG ○○%L○○○	G16,G57	Insert (Grooving)
TGF ○○%L○○○-○○○	C30,G15	Insert (Grooving)
TH-3L	M158,M159	Spare Parts (Wrench)
TH-4	M36,M44,P18	Spare Parts (Hexagon Wrench / T-shaped type)
TH8X15	M44,P6	Spare Parts (Screw)
TKN ○(○)	H25	Insert (Cut-Off)
TKN ○(○)-P	H25	Insert (Cut-Off)
TK%L ○(○)	H25	Insert (Cut-Off)
TK%L ○(○)-P	H25	Insert (Cut-Off)
TKF ○○L○○○-ASR	C32,E16	Insert (Grooving / Turning)
TKF ○○%L○○○-AS	C32,E16	Insert (Grooving / Turning)
TKF ○○%L○○○-NB(○)	C32,E16,H6,H7	Insert (Grooving / Turning)
TKF ○○%L○○○-NB-○○DR	H6,H7	Insert (Cut-Off)
TKF ○○%L○○○-S	H6,H7	Insert (Cut-Off)
TKF ○○%L○○○-S-○○DR	H6,H7	Insert (Cut-Off)
TKF ○○%L○○○-T	H6,H7	Insert (Cut-Off)
TKF ○○%L○○○-T-○○DR	H6,H7	Insert (Cut-Off)
TKFB ○○L○○○○MR	B92,E12	Insert (Back Turning)

Description	Page	Category
TKFB ○○R○○○○○-GQ	B93,E12	Insert (Back Turning)
TKFB ○○R○○○○○M	B92,E12	Insert (Back Turning)
TKFB ○○R○○○○○P-GQ	B93,E12	Insert (Back Turning)
TKFS ○○%L○○○-S	H11	Insert (Cut-Off)
TKFT 12%□○○○○○(○)	J18	Insert (Threading)
TN-32	J16,J17,N9,P12	Spare Parts (Shim)
TN-43	J16,J17,N9,P12	Spare Parts (Shim)
TNEG ○○○○○○%-SSF	B38	Insert (Turning)
TNGA ○○○○○○	B37	Insert (Turning)
TNGA ○○○○○○ME6	C10	Insert (Turning)
TNGA ○○○○○○MEF	C10	Insert (Turning)
TNGA ○○○○○○S○○○○○	B103	Insert (Turning)
TNGA ○○○○○○S○○○○○ME	C11	Insert (Turning)
TNGA ○○○○○○S○○○○○MEH	C11	Insert (Turning)
TNGA ○○○○○○S○○○○○MEP	C10	Insert (Turning)
TNGA ○○○○○○S○○○○○MET	C11	Insert (Turning)
TNGA ○○○○○○S○○○○○SE	C11	Insert (Turning)
TNGA ○○○○○○S○○○○○SET	C11	Insert (Turning)
TNGA ○○○○○○T○○○○○	B103	Insert (Turning)
TNGA ○○○○○○T○○○○○ME	C11	Insert (Turning)
TNGA ○○○○○○T○○○○○SE	C11	Insert (Turning)
TNGG ○○○○○○AH	B37	Insert (Turning)
TNGG ○○○○○○FP-TK	B35	Insert (Turning)
TNGG ○○○○○○MFP-SK	B35	Insert (Turning)
TNGG ○○○○○○TK	B36	Insert (Turning)
TNGG ○○○○○○%L	B39	Insert (Turning)
TNGG ○○○○○○%-25R	B39	Insert (Turning)
TNGG ○○○○○○%-A3	B37	Insert (Turning)
TNGG ○○○○○○%-B/C	B38,B39	Insert (Turning)
TNGG ○○○○○○%-S	B38	Insert (Turning)
TNGM ○○○○○○S○○○○○BB○	C11	Insert (Turning)
TNGN ○○○○○○S○○○○○	B103	Insert (Turning)
TNGN ○○○○○○T○○○○○	B103	Insert (Turning)
TNGU ○○○○○○MER-U	B48	Insert (Turning)
TNGU ○○○○○○(○)MFR-F	B48	Insert (Turning)
TNGU ○○○○○○(○)MFR-U	B48	Insert (Turning)
TNMA ○○○○○○	B37	Insert (Turning)
TNMG ○○○○○○	B34	Insert (Turning)
TNMG ○○○○○○AH	B37	Insert (Turning)
TNMG ○○○○○○C	B37	Insert (Turning)
TNMG ○○○○○○CQ	B33	Insert (Turning)
TNMG ○○○○○○GC	B37	Insert (Turning)
TNMG ○○○○○○GP	B33	Insert (Turning)
TNMG ○○○○○○GS	B33	Insert (Turning)
TNMG ○○○○○○GT	B34	Insert (Turning)
TNMG ○○○○○○HQ	B33	Insert (Turning)
TNMG ○○○○○○HS	B34	Insert (Turning)
TNMG ○○○○○○MQ	B36	Insert (Turning)
TNMG ○○○○○○MS	B36	Insert (Turning)
TNMG ○○○○○○MU	B36	Insert (Turning)
TNMG ○○○○○○PG	B33	Insert (Turning)
TNMG ○○○○○○PH	B34	Insert (Turning)
TNMG ○○○○○○PP	B33	Insert (Turning)
TNMG ○○○○○○PQ	B33	Insert (Turning)
TNMG ○○○○○○PS	B33	Insert (Turning)
TNMG ○○○○○○PT	B34	Insert (Turning)
TNMG ○○○○○○%-C	B39	Insert (Turning)
TNMG ○○○○○○%-ST	B36	Insert (Turning)
TNMG ○○○○○○TK	B36	Insert (Turning)
TNMG ○○○○○○XF	B35	Insert (Turning)
TNMG ○○○○○○XP	B35	Insert (Turning)
TNMG ○○○○○○XQ	B35	Insert (Turning)
TNMG ○○○○○○XS	B35	Insert (Turning)
TNMG ○○○○○○ZS	B37	Insert (Turning)
TNMM ○○○○○○M	C23	Insert (Turning)
TNMM ○○○○○○M-NE	C23	Insert (Turning)
TNMM ○○○○○○M-SE	C23	Insert (Turning)
TNMM ○○○○○○PX	B34	Insert (Turning)
TNMM ○○○○○○S○○○○○	C19	Insert (Turning)
TNW-32	P12	Spare Parts (Shim)
TPET ○○○○○○(○)F%-USF	B78	Insert (Turning)
TPET ○○○○○○(○)MF%-USF	B78	Insert (Turning)
TPET ○○○○○○(○)M%-FSF	B78	Insert (Turning)
TPET ○○○○○○(○)%L-FSF	B78	Insert (Turning)
TPGB ○○○○○○(○)	B79,C27,J31	Insert (Turning / Threading)
TPGB ○○○○○○MEF	C16	Insert (Turning)

# Description Index

○ : Figure, □ : Alphabet

Description	Page	Category
TPGB ○○○○○○NE	<b>C27</b>	Insert (Turning)
TPGB ○○○○○○SE	<b>C26</b>	Insert (Turning)
TPGB ○○○○○○S○○○○○MES	<b>C16</b>	Insert (Turning)
TPGB ○○○○○○S○○○○○MET	<b>C16</b>	Insert (Turning)
TPGB ○○○○○○S○○○○○SET	<b>C16</b>	Insert (Turning)
TPGB ○○○○○○T○○○○○ME	<b>C16</b>	Insert (Turning)
TPGB ○○○○○○T○○○○○SE	<b>C16</b>	Insert (Turning)
TPGH ○○○○○○M%L	<b>B76</b>	Insert (Turning)
TPGH ○○○○○○M%L-H	<b>B77</b>	Insert (Turning)
TPGH ○○○○○○%L	<b>B75</b>	Insert (Turning)
TPGH ○○○○○○%L-H	<b>B77</b>	Insert (Turning)
TPGN ○○○○○○	<b>B81,C29,M12,M25</b>	Insert (Turning / Milling)
TPGN ○○○○○○NE	<b>C29</b>	Insert (Turning / Milling)
TPGN ○○○○○○SE	<b>C29</b>	Insert (Turning / Milling)
TPGN ○○○○○○S○○○○○	<b>B105</b>	Insert (Turning)
TPGN ○○○○○○S○○○○○SET	<b>C18</b>	Insert (Turning)
TPGN ○○○○○○T○○○○○	<b>B105</b>	Insert (Turning / Milling)
TPGN ○○○○○○T○○○○○ME	<b>C18</b>	Insert (Turning)
TPGN ○○○○○○T○○○○○SE	<b>C18</b>	Insert (Turning)
TPGR ○○○○○○%L-A/B/C	<b>B81</b>	Insert (Turning)
TPGR ○○○○○○%L-F	<b>B80</b>	Insert (Turning)
TPGT ○○○○○○CF	<b>B74</b>	Insert (Turning)
TPGT ○○○○○○M-CF	<b>B74</b>	Insert (Turning)
TPGT ○○○○○○MP-CF	<b>B74</b>	Insert (Turning)
TPGW ○○○○○○S○○○○○MET	<b>C16</b>	Insert (Turning)
TPGW ○○○○○○S○○○○○SET	<b>C16</b>	Insert (Turning)
TPGW ○○○○○○T○○○○○ME	<b>C16</b>	Insert (Turning)
TPGW ○○○○○○T○○○○○SE	<b>C16</b>	Insert (Turning)
TPKN ○○○○PDR	<b>M12</b>	Insert (Milling)
TPKN ○○○○PDR	<b>M12</b>	Insert (Milling)
TPKR ○○○○PDR-S	<b>M12</b>	Insert (Milling)
TPMH ○○○○○○	<b>C27</b>	Insert (Turning)
TPMH ○○○○○○NE	<b>C27</b>	Insert (Turning)
TPMH ○○○○○○L-NE	<b>C28</b>	Insert (Turning)
TPMH ○○○○○○SE	<b>C27</b>	Insert (Turning)
TPMN ○○○○○○	<b>B81,M12</b>	Insert (Turning / Milling)
TPMR ○○○○PDR-H	<b>M12</b>	Insert (Milling)
TPMR ○○○○○○	<b>B80</b>	Insert (Turning)
TPMR ○○○○○○DP	<b>B80</b>	Insert (Turning)
TPMR ○○○○○○G	<b>B80</b>	Insert (Turning)
TPMR ○○○○○○GP	<b>B80</b>	Insert (Turning)
TPMR ○○○○○○HQ	<b>B80</b>	Insert (Turning)
TPMT ○○○○○○GP	<b>B74</b>	Insert (Turning)
TPMT ○○○○○○HQ	<b>B75</b>	Insert (Turning)
TPMT ○○○○○○PP	<b>B74</b>	Insert (Turning)
TPMT ○○○○○○XP	<b>B75</b>	Insert (Turning)
TPMT ○○○○○○XQ	<b>B75</b>	Insert (Turning)
TPMX ○○○○○○WP	<b>B74</b>	Insert (Turning)
TS-3S	<b>D17,P7</b>	Spare Parts (Lock Pin)
TT 43ER○○○M	<b>J22</b>	Insert (Threading)
TT ○○%L○○○○	<b>J22,J23</b>	Insert (Threading)
TT-15	<b>M27,M32,M91,P18</b>	Spare Parts (Torx Wrench / T-shaped type)
TT-15L	<b>M147,M149</b>	Spare Parts (Torx Wrench / T-shaped type)
TT-25	<b>M166,P18</b>	Spare Parts (Torx Wrench / T-shaped type)
TT-25L	<b>M49,M101,M104,M105,P18</b>	Spare Parts (Torx Wrench / T-shaped type)
TT-30	<b>M166,P18</b>	Spare Parts (Torx Wrench / T-shaped type)
TTC-20	<b>M36,M40,P18</b>	Spare Parts (Torx Wrench / T-shaped type)
TTC-25	<b>M38,M94,P18</b>	Spare Parts (Torx Wrench / T-shaped type)
TTP-20	<b>M117,M119,M170,M171,M175,M177,P18</b>	Spare Parts (Torx Plus Wrench / T-shaped type)
TTX 32R○○○○○(○)	<b>J21</b>	Insert (Threading)
TTX 32R○○○○○(○)S	<b>J21</b>	Insert (Threading)
TWBR ○○○○○○	<b>F34</b>	Twin Bars (Turning)
TWBTR ○○○○○○	<b>F35</b>	Twin Bars (Turning)
TWFGL ○○○	<b>G72</b>	Twin Bars (Face Grooving)
TWFGTR ○○○	<b>G73</b>	Twin Bars (Face Grooving)
<b>V</b>		
VBET ○○○○○○(○)M%L-F	<b>B83</b>	Insert (Turning)
VBET ○○○○○○(○)M%L-FSF	<b>B82</b>	Insert (Turning)
VBET ○○○○○○(○)%L-FSF	<b>B82</b>	Insert (Turning)
VBET ○○○○○○(○)M%L-Y	<b>B83</b>	Insert (Turning)
VBGT ○○○○○○(○)M%L-F	<b>B83</b>	Insert (Turning)
VBGT ○○○○○○(○)M%L-Y	<b>B84</b>	Insert (Turning)
VBGT ○○○○○○(○)%L-F	<b>B83</b>	Insert (Turning)
VBGT ○○○○○○(○)%L-Y	<b>B84</b>	Insert (Turning)

Description	Page	Category
VBGW ○○○○○○MEF	<b>C17</b>	Insert (Turning)
VBGW ○○○○○○S○○○○○MES	<b>C17</b>	Insert (Turning)
VBGW ○○○○○○S○○○○○MET	<b>C17</b>	Insert (Turning)
VBGW ○○○○○○S○○○○○SET	<b>C17</b>	Insert (Turning)
VBGW ○○○○○○T○○○○○ME	<b>C17</b>	Insert (Turning)
VBGW ○○○○○○T○○○○○SE	<b>C17</b>	Insert (Turning)
VBMT ○○○○○○	<b>C28</b>	Insert (Turning)
VBMT ○○○○○○GP	<b>B82</b>	Insert (Turning)
VBMT ○○○○○○HQ	<b>B82</b>	Insert (Turning)
VBMT ○○○○○○NE	<b>C28</b>	Insert (Turning)
VBMT ○○○○○○PP	<b>B82</b>	Insert (Turning)
VBMT ○○○○○○SE	<b>C28</b>	Insert (Turning)
VBMT ○○○○○○VF	<b>B82</b>	Insert (Turning)
VCGT ○○○○○○AH	<b>B85</b>	Insert (Turning)
VCGT ○○○○○○%L-A3	<b>B85</b>	Insert (Turning)
VCGW ○○○○○○S○○○○○MET	<b>C17</b>	Insert (Turning)
VCGW ○○○○○○S○○○○○SET	<b>C17</b>	Insert (Turning)
VCGW ○○○○○○T○○○○○ME	<b>C17</b>	Insert (Turning)
VCGW ○○○○○○T○○○○○SE	<b>C17</b>	Insert (Turning)
VCMT ○○○○○○	<b>C28</b>	Insert (Turning)
VCMT ○○○○○○HQ	<b>B85</b>	Insert (Turning)
VCMT ○○○○○○NE	<b>C28</b>	Insert (Turning)
VCMT ○○○○○○PP	<b>B85</b>	Insert (Turning)
VCMT ○○○○○○SE	<b>C28</b>	Insert (Turning)
VCMT ○○○○○○VF	<b>B85</b>	Insert (Turning)
VNBR ○○○○-○○(○)	<b>F29</b>	System Tip-bars (Boring)
VNBR ○○○○-○○(○)NB	<b>C34,F29</b>	System Tip-bars (Boring)
VNBR ○○○○(○○)-○○(○)S	<b>F28</b>	System Tip-bars (Boring)
VNBTR ○○○○-○○(○)	<b>F29</b>	System Tip-bars (Boring)
VNBXR ○○○○(○)-○○(○)S	<b>F32</b>	System Tip-bars (Boring)
VNFGR ○○○○-○○	<b>G70</b>	System Tip-bars (Face Grooving)
VNFGR ○○○○-○○NB	<b>C34,G70</b>	System Tip-bars (Face Grooving)
VNGR ○○○○-○○	<b>G45</b>	System Tip-bars (Grooving)
VNGR ○○○○-○○NB	<b>C34,G45</b>	System Tip-bars (Grooving)
VNGA ○○○○○○	<b>B41</b>	Insert (Turning)
VNGA ○○○○○○ME4	<b>C12</b>	Insert (Turning)
VNGA ○○○○○○MEF	<b>C12</b>	Insert (Turning)
VNGA ○○○○○○S○○○○○	<b>B104</b>	Insert (Turning)
VNGA ○○○○○○S○○○○○ME	<b>C12</b>	Insert (Turning)
VNGA ○○○○○○S○○○○○MEH	<b>C12</b>	Insert (Turning)
VNGA ○○○○○○S○○○○○MEP	<b>C12</b>	Insert (Turning)
VNGA ○○○○○○S○○○○○MET	<b>C12</b>	Insert (Turning)
VNGA ○○○○○○S○○○○○SE	<b>C12</b>	Insert (Turning)
VNGA ○○○○○○S○○○○○SET	<b>C12</b>	Insert (Turning)
VNGA ○○○○○○T○○○○○	<b>B104</b>	Insert (Turning)
VNGA ○○○○○○T○○○○○ME	<b>C12</b>	Insert (Turning)
VNGA ○○○○○○T○○○○○SE	<b>C12</b>	Insert (Turning)
VNGG ○○○○○○MFP-SK	<b>B41</b>	Insert (Turning)
VNGG ○○○○○○M-SK	<b>B41</b>	Insert (Turning)
VNGG ○○○○○○%L	<b>B41</b>	Insert (Turning)
VNMA ○○○○○○S○○○○○	<b>B104</b>	Insert (Turning)
VNMG ○○○○○○	<b>B40</b>	Insert (Turning)
VNMG ○○○○○○GP	<b>B40</b>	Insert (Turning)
VNMG ○○○○○○HQ	<b>B40</b>	Insert (Turning)
VNMG ○○○○○○MQ	<b>B41</b>	Insert (Turning)
VNMG ○○○○○○MS	<b>B41</b>	Insert (Turning)
VNMG ○○○○○○MU	<b>B41</b>	Insert (Turning)
VNMG ○○○○○○PP	<b>B40</b>	Insert (Turning)
VNMG ○○○○○○PQ	<b>B40</b>	Insert (Turning)
VNMG ○○○○○○TN-V	<b>B40</b>	Insert (Turning)
VNMG ○○○○○○%L-VC	<b>B40</b>	Insert (Turning)
VNMG ○○○○○○VF	<b>B40</b>	Insert (Turning)
VNMM ○○○○○○M	<b>C23</b>	Insert (Turning)
VNMM ○○○○○○M-NE	<b>C23</b>	Insert (Turning)
VNMM ○○○○○○M-SE	<b>C23</b>	Insert (Turning)
VNTR ○○○○-○○	<b>J30</b>	System Tip-bars (Threading)
VPET ○○○○○○(○)F%L-USF	<b>B88</b>	Insert (Turning)
VPET ○○○○○○(○)M%L-F	<b>B87</b>	Insert (Turning)
VPET ○○○○○○(○)M%L-FSF	<b>B87</b>	Insert (Turning)
VPET ○○○○○○(○)MF%L-J	<b>B88</b>	Insert (Turning)
VPET ○○○○○○(○)MF%L-U	<b>B88</b>	Insert (Turning)
VPET ○○○○○○(○)MF%L-USF	<b>B88</b>	Insert (Turning)
VPET ○○○○○○(○)%L-FSF	<b>B87</b>	Insert (Turning)
VPGT ○○○○○○CF	<b>B86</b>	Insert (Turning)
VPGT ○○○○○○CK	<b>B86</b>	Insert (Turning)
VPGT ○○○○○○M-CF	<b>B86</b>	Insert (Turning)

T

?

Index



Description	Page	Category
VPGT ○○○○○○M-CK	<b>B86</b>	Insert (Turning)
VPGT ○○○○○○MF-GF	<b>B86</b>	Insert (Turning)
VPGT ○○○○○○MFP-GF	<b>B86</b>	Insert (Turning)
VPGT ○○○○○○MP-CF	<b>B86</b>	Insert (Turning)
VPGT ○○○○○○MP-CK	<b>B86</b>	Insert (Turning)
<b>W</b>		
W-6	<b>G38,G61,P18</b>	Spare Parts (Washer)
W-8	<b>P18</b>	Spare Parts (Washer)
W6-14	<b>P18</b>	Spare Parts (Washer)
W6X17	<b>M40,P6</b>	Spare Parts (Screw)
W6X18	<b>M158,M159,P6</b>	Spare Parts (Wedge Lock Screw)
W6X18N	<b>M32,P6</b>	Spare Parts (Wedge Lock Screw)
W6X20	<b>M158,M159,P6</b>	Spare Parts (Wedge Lock Screw)
W8X16	<b>M94,P6</b>	Spare Parts (Screw)
W8X18	<b>M95,P6</b>	Spare Parts (Screw)
W8X21	<b>M36,P6</b>	Spare Parts (Wedge Lock Screw)
WB-5	<b>F86,P18</b>	Spare Parts (Washer)
WB-6	<b>F86,P18</b>	Spare Parts (Washer)
WB-8	<b>F86,P18</b>	Spare Parts (Washer)
WBET ○○○○○○(○)M%-F	<b>B89</b>	Insert (Turning)
WBGТ ○○○○○○M%-CF	<b>B89</b>	Insert (Turning)
WBGТ ○○○○○○MP%-CF	<b>B89</b>	Insert (Turning)
WBGТ ○○○○○○(○)M%-F	<b>B90</b>	Insert (Turning)
WBGТ ○○○○○○(○)%-F	<b>B90</b>	Insert (Turning)
WBGW ○○○○○○L	<b>B90</b>	Insert (Turning)
WBGW ○○○○○○S○○○○○LSET	<b>C18</b>	Insert (Turning)
WBGW ○○○○○○T○○○○○L-SE	<b>C18</b>	Insert (Turning)
WBMT ○○○○○○L	<b>C28,C29</b>	Insert (Turning)
WBMT ○○○○○○L-NE	<b>C28,C29</b>	Insert (Turning)
WBMT ○○○○○○L-SE	<b>C28,C29</b>	Insert (Turning)
WBMT ○○○○○○%-DP	<b>B89</b>	Insert (Turning)
WC- ○○	<b>M158,M159</b>	Spare Parts (Wedge)
WCMT ○○○○○○	<b>K69,K71</b>	Insert (Drilling)
WCS-1N	<b>D15,N6,P14</b>	Spare Parts (Clamp Set)
WCS-8	<b>D20,F78,N7,P14</b>	Spare Parts (Clamp Set)
WDRС○(○)	<b>K21,K22,K23,K26, K27,K28,K29</b>	Spare Parts (Wrench)
WN-1	<b>D15,D20,N6,N7,P19</b>	Spare Parts (Shim Nut)
WNEU ○○○○○○EN-GL	<b>M17</b>	Insert (Milling)
WNGA ○○○○○○MEF	<b>C13</b>	Insert (Turning)
WNGA ○○○○○○S○○○○○ME	<b>C13</b>	Insert (Turning)
WNGA ○○○○○○S○○○○○MET	<b>C13</b>	Insert (Turning)
WNGA ○○○○○○S○○○○○SE	<b>C13</b>	Insert (Turning)
WNGA ○○○○○○S○○○○○SET	<b>C13</b>	Insert (Turning)
WNGA ○○○○○○T○○○○○ME	<b>C13</b>	Insert (Turning)
WNGG ○○○○○○AH	<b>B45</b>	Insert (Turning)
WNGG ○○○○○○TK	<b>B44</b>	Insert (Turning)
WNGG ○○○○○○%	<b>B45</b>	Insert (Turning)
WNGG ○○○○○○%-S	<b>B45</b>	Insert (Turning)
WNGT ○○○○○○FN-AM	<b>M17</b>	Insert (Milling)
WNMA ○○○○○○	<b>B45</b>	Insert (Turning)
WNMG ○○○○○○	<b>B43</b>	Insert (Turning)
WNMG ○○○○○○C	<b>B45</b>	Insert (Turning)
WNMG ○○○○○○CJ	<b>B42</b>	Insert (Turning)
WNMG ○○○○○○CQ	<b>B42</b>	Insert (Turning)
WNMG ○○○○○○GC	<b>B45</b>	Insert (Turning)
WNMG ○○○○○○GP	<b>B42</b>	Insert (Turning)
WNMG ○○○○○○GS	<b>B43</b>	Insert (Turning)
WNMG ○○○○○○GT	<b>B43</b>	Insert (Turning)
WNMG ○○○○○○HQ	<b>B42</b>	Insert (Turning)
WNMG ○○○○○○HS	<b>B43</b>	Insert (Turning)
WNMG ○○○○○○MQ	<b>B44</b>	Insert (Turning)
WNMG ○○○○○○MS	<b>B44</b>	Insert (Turning)
WNMG ○○○○○○MU	<b>B44</b>	Insert (Turning)
WNMG ○○○○○○PG	<b>B43</b>	Insert (Turning)
WNMG ○○○○○○PH	<b>B43</b>	Insert (Turning)
WNMG ○○○○○○PP	<b>B42</b>	Insert (Turning)
WNMG ○○○○○○PQ	<b>B42</b>	Insert (Turning)
WNMG ○○○○○○PS	<b>B43</b>	Insert (Turning)
WNMG ○○○○○○PT	<b>B43</b>	Insert (Turning)
WNMG ○○○○○○TK	<b>B44</b>	Insert (Turning)
WNMG ○○○○○○WP	<b>B42</b>	Insert (Turning)
WNMG ○○○○○○WQ	<b>B42</b>	Insert (Turning)
WNMG ○○○○○○XP	<b>B44</b>	Insert (Turning)
WNMG ○○○○○○XQ	<b>B44</b>	Insert (Turning)

Description	Page	Category
WNMG ○○○○○○XS	<b>B44</b>	Insert (Turning)
WNMG ○○○○○○ZS	<b>B45</b>	Insert (Turning)
WNMM ○○○○○○M	<b>C23</b>	Insert (Turning)
WNMM ○○○○○○M-NE	<b>C23</b>	Insert (Turning)
WNMM ○○○○○○M-SE	<b>C23</b>	Insert (Turning)
WNMU ○○○○○○EN-GH	<b>M17</b>	Insert (Milling)
WNMU ○○○○○○EN-GM	<b>M17</b>	Insert (Milling)
WNMU ○○○○○○EN-SM	<b>M17</b>	Insert (Milling)
WOF07R	<b>M36</b>	Spare Parts (Wedge)
WP-1S	<b>D15,N6,P7</b>	Spare Parts (Shim Pin)
WP5X11	<b>F78,P7</b>	Spare Parts (Shim Pin)
WP5X15	<b>D20,N7,P7</b>	Spare Parts (Shim Pin)
WPGT ○○○○○○M%-Y	<b>B91</b>	Insert (Turning)
WPGT ○○○○○○%-Y	<b>B91</b>	Insert (Turning)
WPGW ○○○○○○	<b>B91</b>	Insert (Turning)
WPMT ○○○○○○	<b>C29</b>	Insert (Turning)
WPMT ○○○○○○GP	<b>B91</b>	Insert (Turning)
WPMT ○○○○○○HQ	<b>B91</b>	Insert (Turning)
WPMT ○○○○○○NE	<b>C29</b>	Insert (Turning)
WPMT ○○○○○○SE	<b>C29</b>	Insert (Turning)
WSP-1	<b>D15,N6,P18</b>	Spare Parts (Spacer)
WTENN ○○○○□-○○N	<b>D15</b>	Toolholder (Turning)
WTJN%L ○○○○□-○○N	<b>D15</b>	Toolholder (Turning)
WTKN%L ○○○○□-○○N	<b>D15</b>	Toolholder (Turning)
WTN-33	<b>D15,N6,P12</b>	Spare Parts (Shim)
WTN-33-20	<b>D15,P12</b>	Spare Parts (Shim)
WWLN%L ○○○○□-○○	<b>D20</b>	Toolholder (Turning)
WWN-42	<b>D20,N7,P12</b>	Spare Parts (Shim)
WWP-42	<b>F78,P12</b>	Spare Parts (Shim)
WWP-42-16	<b>F78,P12</b>	Spare Parts (Shim)
<b>Z</b>		
ZCMT ○○○○○○	<b>K53</b>	Insert (Drilling)
ZCMT ○○○○○○SP	<b>K53</b>	Insert (Drilling)
ZCMT ○○○○○○SU	<b>K53</b>	Insert (Drilling)
ZXMT ○○○○○○GM	<b>K38</b>	Insert (Drilling)
ZXMT ○○○○○○GM-E	<b>K38</b>	Insert (Drilling)
ZXMT ○○○○○○GM-I	<b>K38</b>	Insert (Drilling)
ZXMT ○○○○○○GH	<b>K38</b>	Insert (Drilling)
ZXMT ○○○○○○GH-E	<b>K38</b>	Insert (Drilling)
ZXMT ○○○○○○SM	<b>K38</b>	Insert (Drilling)
ZXMT ○○○○○○SM-E	<b>K38</b>	Insert (Drilling)